MAXON SMARTLINK[®] CV

Intelligent Valve Actuator

Honeywell



Technical Catalog

TABLE OF CONTENTS

Product descrip	tion	. 1
Features and bene	efits	. 1
Applicati	ions	. 1
Model Num	aber	2
ModerNull	Butterfly valves	. <u>2</u>
	Ball valves	. 3
	Control actuator	. 5
	Spare actuator	. 6
	Control interface	. 7
Specificati	ions	. 8
	System specifications	. 8
	Capacities - butterfly valves	. 9
	Capacities - ball valves	. 11
Materials of construct	tion	. 12
	Butterfly valves	. 12
	Ball valves	. 15
Dimensions and weig	ahts	. 16
	Butterfly valves	. 16
	Ball valves	. 23
	Control interface	. 30
	DIN rail assembly	. 30
	Interface panel	. 31
Installation instructi	ons	. 32
	Mechanical installation	. 32
	Electrical installation	. 32
Operating instructi	ions	. 35
	Control interface	. 35
	Wiring checkout	. 36
	Operational checkout	. 36
	User commands	. 37
	Valve characterization	. 39
	MAXON SMARTLINK [®] commissioning table	. 40
	Unit locking and passcode entry	. 41
	Manual operation	. 42
	High and low valve position limits	. 42
	Alarm codes	. 43
Maintenance instructi	ions	. 44
	Actuator replacement	. 44
SMARTLINK [®] Reference Tab	bles	. 46
	Table 1: SMARTLINK [®] Control Interface Input / Output Terminal Description	. 46
	Table 2: SMARTLINK [®] Valve Actuator Input / Output Terminal Description	. 47
	Table 3: SMARTLINK [®] Control Interface Wiring Specifications	. 47
	Table 4: SMARTLINK® DIN Rail Assembly Input / Output Terminal Description	. 48
	Table 5: SMARTLINK [®] DIN Rail Assembly Wiring Specifications	. 49
	Table 6: SMARTLINK [®] Interface Relay Checkout Procedures	. 50
	Table 7: SMARTLINK [®] System Configuration Summary	. 51
	Table 8: SMARTLINK [®] User Commands - Command Set 'A'	. 52
	Table 9: SMARTLINK [®] User Commands - Command Set 'B'	. 54
	Table 10: SMARTLINK [®] User Commands - Command Set 'C'	. 56

PRODUCT DESCRIPTION

The MAXON SMARTLINK[®] Intelligent Valve Actuator Assembly is a rugged, turnkey solution for industrial flow control applications that require a high degree of precision, repeatability, and commissioning flexibility in a small space.

In addition, SMARTLINK[®] provides easy, on-site customization of the valve flow characteristics. This feature makes it an ideal solution for parallel valve positioning systems in combustion control applications.

The SMARTLINK[®] assembly includes two components: 1) a Valve Actuator direct-coupled to a valve and, 2) a Control Interface unit between the Valve Actuator and the user's process controller, PLC, or DCS.

The **Valve Actuator** is an industrial rated, factory-calibrated assembly that incorporates a heavy-duty, planetary gear-head with integrated, long-life position feedback. It also includes a stepper motor for continuous duty, high precision valve control. The Valve Actuator is powered by 24VDC through a four wire cable that also includes a digital position communications interface to ensure reliable operation in electrically noisy environments.

The **Control Interface** is a DIN rail-mounted electronic device that "links" the user's process controller to the Valve Actuator. Several front panel-mounted switches and lights are provided for displaying alarms, simple valve configuration, and valve characterization. The Control Interface also provides a precision, 4-20mA position feedback signal, several relay driver outputs for indication of alarm and control status, and digital inputs for commanding the valve to its maximum and minimum positions. The unit is typically mounted in a control panel along with a MAXON or user-supplied 24VDC supply and output interface relays.

FEATURES AND BENEFITS

- SMARTLINK® actuator fits various bodies to meet all combustion flow control needs butterfly, ball, linkage arm
- Easy customization of the valve flow characteristic for high precision flow control and repeatability
- Maximize efficiency and minimize emissions with direct coupled, factory calibrated valve and actuator assembly
- Rugged industrial design for reliable, long-life operation
- Reduced maintenance no lubrication required
- Hazardous Location approved: ATEX and IEC Ex; Non-Incendive for Class I, Division 2; CSA, UL, FM, CE

APPLICATIONS

SMARTLINK[®] valve actuators are designed for precision control of industrial combustion systems, boiler combustion systems, and related heating process flows. The rugged industrial package adds value to many heating and manufacturing processes by providing highly accurate, characterizable flow control with enhanced, digital intelligence.

Typical applications include:

- Simple burner ratio controls
- Low NOx and low CO burner controls
- · Control of combustion systems on processes sensitive to products of combustion
- Control of complex burners with staging or flue gas recirculation
- · Precise control of process flows like feed water, atmosphere gases, and even product feeds
- Accurate flow control of metered processes and process heaters for liquids and gases

SMARTLINK[®] valve actuators have numerous types of applications in addition to those listed above. Contact your MAXON representative for additional application questions.

APPROVALS

Approval agency	Detail
Factory Mutual	Non-incendive for Class I Division 2, Groups A, B, C & D Hazardous (Classified) Indoor and Outdoor (Type 4X for Valve Actuator only) Locations
UL (US and Canadian)	All actuator-related requirements in UL353 (Limit Controls)
CE	CE EMC Directive: Electromagnetic Immunity and Emissions (EN61000)
U U U U U U U U U U U U U U U U U U U	CE Low Voltage Directive: Electrical Safety (EN61010-1)
ATEX	ATEX approval: II3 G Ex nA nC IIC T4 Ta=40C to +70C; IP66 when components mounted in enclosure (valve actuator is II 3 G Ex nA nC IIC T4 Ta=-40C to +70C; IP66 and II 3 D Ex tD A22 T135C) and IEC Ex nA nC IIC T4 Ta=70C Gc, Ex tC IIIC T135C Dc

MODEL NUMBER

Butterfly valves

Configu	red Item	Number			Valve	e Body			Actuator				Fluid
Valve Size	Flow Capacity	Series		Body Connection	Body Seals	Body Material	Body Internals		Torque Rating	Software Version	Language		Fluid
0100	S	SLCV	-	А	A	1	1	-	1	1C	A	-	I

<u>Size</u> 0100 - 1" 0125 - 1.25" 0150 - 1.5" 0200 - 2" 0250 - 2.5" 0300 - 3" 0400 - 4" 0600 - 6"
0800 - 8"
1000 - 10" 1200 - 12"
1400 - 14" 1600 - 16"
Flow Canacity

S - Standard

<u>Series</u>

SLCV - SMARTLINK® Butterfly Valve

Body Connection

A - ANSI Flange M - "M" Style Flange

- X Special
- * Actuator Only

Body Seals

- A Buna-N
- B Viton
- X Special * - Actuator Only

Body Material

- 1 Cast Iron 2 - Carbon Steel
- 3 Brass
- 5 Stainless Steel
- X Special
- * Actuator Only

Body Internals

- 1 Trim Package 1 2 - Trim Package 1, Oxy Clean
- 5 Trim Package 2
- 6 Trim Package 2, Oxy Clean
- X Special
- * Actuator Only

[1] The latest version is the default.

Trim Package Options and Typical Materials:

1 - 300 Series Stainless Steel stem, 300 Series Stainless Steel disc and Bronze bushings

2 - 300 Series Stainless Steel stem, 300 Series Stainless Steel disc and PEEK bushings

Torque Rating

1 - 33.9 N.m X - Special

* - Valve Body Only

Software Version [1]

1C - Standard software ** - Valve Body Only

Language

A - English X - Special

* - Valve Body Only

Fluid

- A 158F/70C Max Air
- B 350F/177C Max Air
- C 400F/204C Max Air
- D Butane Gas
- E Coke Oven Gas
- F Digester Gas
- G Landfill Gas
- H Manufactured Gas
- I Natural Gas
- J Oxygen
- K Propane Gas
- L Propane/Butane Blend
- Gas
- M Refinery Gas N - Sour Natural Gas
- O Town Gas
- X Special

Ball valves

Configu	red Item Nu	mber			Valve	Body			Actuator			
Valve Size	Flow Capacity	Series		Body Connection	Body Seals & Packing	Body Material	Body Internals		Torque Rating	Software Version	Language	
0100	7	SLBV	-	В	E	2	1	-	1	1C	A	
Size 00505" 007575" 0100 - 1" 0125 - 1.25" 0150 - 1.5" 0200 - 2" Flow Capaci 1 - 1/32" Slot 2 - 1/16" Slot 3 - 1/8" Slot 4 - 3/16" Slot 5 - 1/4" Slot 6 - 30° V 7 - 60° V 8 - 90° V 9 - Round Po	ty rt			B A B X * B E X * B 2 5 X * B 2 5 X *	ody Conne - ANSI Flar - ANSI Thre - Special [1 - Actuator O ody Seals & - Teflon - Special [1 - Actuator O ody Materia - Carbon St - Special [1 - Actuator O ody Interna - Trim Packa	<u>ction</u> nged 150# eaded] nnly & Packing } Maly eel Steel] nnly <u>al</u> eel Steel		Ton 1 X - * - 1C ** - <u>Lan</u> A - X - * -	rque Rating 33.9 N.m Special Valve Body ftware Vers - Standard Valve Body English Special Valve Body	I Only software Only Only		
<u>Series</u> SLBV - SMAF	RTLINK [®] Ba	ll Valve		X *	X - Special [1] * - Actuator Only							

[1] Please see page 4 for all available ball valve options. These will require a special configuration.

[2] The latest version is the default.

Trim Package Options and Typical Materials:

1 - 300 Series Stainless Steel Ball, 300 Series Stainless Steel Stem and Teflon Seat Rings

32M-06002E

ADDITIONAL BALL VALVE OPTIONS FOR SPECIAL CONFIGURATION

Body Connection Flat-Faced Flanged Butt Weld	Body Seals & Packing Body Seals	Body Material Duplex 400 SS	Body Internals Stem & Ball
Extended Butt Weld	Graphite	Alloy 20	Duplex
Clamp Ends	Kel-F	Monel	400 SS
Groove Ends	Peek	Bronze	Alloy 20
Socket Weld	RPTFE	Hastelloy c	Monel
Extended Socket Weld	Carbon-Filled RPTFE	CF8	Bronze
Tube Ends	UHMWPE	Titanium	Hastelloy c
300# RF Flanged	Viton		CF8
600# RF Flanged			Titanium
	Packing		
	Graphite		Seat Rings
	RPIFE		PFA
	Carbon-Filled RPTFE		Delrin
			Hostalion
	Graphita		Rei-F Rook
	Hostoflon		DDTEE
	Kol-E		
	Peek		
	BPTFF		
	Carbon-Filled BPTFF		
	UHMWPE		

Control actuator

Configured Item Number		Actuator						
Series		Connection		Torque Rating	Software Version	Language		Rotation
SL CA	-	K1	-	1	1C	A	-	2

 $\frac{Series}{\text{SL CA}} - \text{SMARTLINK}^{\textcircled{B}} \text{ Control Actuator}$

Connection K1 - 1/2" Keyed Output Shaft L1 - Linkage Arm S1 - 1/2" Square Output Shaft S2 - 3/4" Square Output Shaft

Torque Rating 1 - 33.9 N.m X - Special

Rotation 1 - Clockwise

2 - Counter-clockwise

Software Version [1] 1C - Standard software

Language A - English X - Special

[1] The latest version is the default

CONTROL ACTUATOR ROTATION

1) Clockwise rotation

2) Counter-clockwise rotation



Spare actuator

Configured Item Number		Actuator						
Series		Torque Rating	Software Version	Language		Rotation		
SL SA	-	1	1C	A	-	2		

Scries SL SA - SMARTLINK[®] Spare Actuator

Torque Rating 1 - 33.9 N.m X - Special

Software Version [2] 1C - Standard software

<u>Language</u> A - English X - Special

Rotation [1] 1 - Clockwise 2 - Counter-clockwise

- [1] The correct rotation must be specified.a. Butterfly Valves are always supplied in a counter-clockwise rotation.

 - b. Ball Valves are always supplied in a counter-clockwise rotation.c. Control Actuators are customer-specific and rotation must be obtained from the actuator this spare is intended to replace.

[2] The latest version is the default.

Control interface

Configured Item #			Assembly Options													
Series		Software Version	Language	Enclosure		Alarm	Control Enable	High Position Limit	Low Position Limit	Manual Control		Power Supply	DIN Rail Assembly		High Position Command	Low Position Command
SL CI	-	1C	A	A		1	1	1	1	1	-	А	1	-	A	A

Series SL CI - SMARTLINK[®] Control Interface

Software Version [1]

1C - Standard software

Language

- A English X Special

Enclosure

- 0 None
- A 20x16x8, NEMA 4, window
- X Special

<u>Alarm</u>

- 0 None 1 24VDC relay
- X Special

Control Enable

0 - None

- 1 24VDC relay
- X Special

High Position Limit

- 0 None
- 1 24VDC relay
- X Special

Low Position Limit

- 0 None
- 1 24VDC relay
- X Special

Manual Control

- 0 None 1 24VDC relay

X - Special

Power Supply

- 0 None
- A 24VDC relay
- X Special * Included with enclosure

DIN Rail Assembly

- 0 None
- 1 Parts mounted, factory wired
- 2 Parts mounted, not wired
- X Special
- * Included with enclosure

High Position Command

- 0 None A 120VAC X Special

Low Position Command

- 0 None
- A 120VAC
- X Special

[1] The latest version is the default

7

SPECIFICATIONS

System specifications

Position accuracy	0.1 degrees (measured on the valve actuator shaft)
Position command	4-20mA isolated input; 4.8V burden @ 20mA
Position feedback	4-20mA isolated input; 400 ohm max load
Power input	24VDC +/-5%, 25W (maximum)
Duty cycle	Continuous
Relay driver outputs	Open collector, 30 VDC & 100mA max
Digital inputs	5-24 VDC @ 10mA (max)
Ambient temperature	-40°C to 70°C
Enclosure ratings	NEMA 1, IP20 (Control Interface and all DIN rail options) NEMA 4, IP66 (All standard, MAXON enclosures with factory-wired Control Interface and rail-mounted options) NEMA 4, IP66 (Valve actuator)
Output relays (optional)	Output contacts: 250 VAC/DC @ 6 amps DIN rail-mounted
Input relays (optional)	Input coil voltage: 120VAC (230VAC and 24VDC options available) DIN rail-mounted
Universal Power Supply (optional)	Power input: 115-230 VAC +/-10%, 50/60 Hz Power output: 24VDC, 2.3 amps (max)
Travel Time	14 seconds (full open to close)

Capacities - butterfly valves

BUTTERFLY VALVES - 1" THROUGH 4"

Size	Minimum controllable Cv rating	Maximum Cv rating	Maximum inlet pressure (bar)	Maximum body pressure (bar)
1"	0.50	27	6.21	6.21
1.25"	0.60	70	6.21	6.21
1.5"	0.70	105	6.21	6.21
2"	1.30	190	6.21	6.21
2.5"	2.40	260	5.59	6.21
3"	3.00	360	3.73	6.21
4"	5.00	750	1.86	6.21

	Gao	Sugge	ested materia	l options	Maximum fluid	Maximum ambient
Fluid	code	Body seals	Body material	Body internals	temperature rating	temperature rating
70°C Max Air	A	A, B	1, 2, 3, 5	1, 5	70°C	70°C
Butane Gas	D	A, B	1, 2, 3, 5	1, 5	70°C	70°C
Coke Oven Gas	E	В	1, 2, 5	1, 5	70°C	70°C
Digester Gas	F	В	5	5	70°C	70°C
Landfill Gas	G	В	5	5	70°C	70°C
Manufactured Gas	Н	В	5	5	70°C	70°C
Natural Gas	I	A, B	1, 2, 3, 5	1, 5	70°C	70°C
Oxygen	J	В	3, 5	2, 6	70°C	70°C
Propane Gas	K	A, B	1, 2, 3, 5	1, 5	70°C	70°C
Propane/Butane Blend Gas	L	A, B	1, 2, 3, 5	1, 5	70°C	70°C
Refinery Gas	М	В	5	5	70°C	70°C
Sour Natural Gas	N	В	5	5	70°C	70°C
Town Gas	0	A, B	5	5	70°C	70°C

<u>Body seals</u> A - Buna-N B - Viton

- Body material 1 Cast iron 2 Carbon steel

3 - Brass 5 - Stainless steel

- Body internals 1 Trim package 1 2 Trim package 1, oxy clean 5 Trim package 2 6 Trim package 2, oxy clean

BUTTERFLY VALVES - 6" THROUGH 16"

Size	Minimum controllable Cv rating	Maximum Cv rating	Maximum inlet pressure (bar)	Maximum body pressure (bar)
6"	12.5	1425	0.31	6.21
8"	22	2500	0.31	6.21
10"	35	4500	0.31	6.21
12"	50	6400	0.31	6.21
14"	67	8800	0.31	6.21
16"	88	11700	0.31	6.21

	Gas	Suggested material options				Maximum fluid	Maximum ambient	
Fluid	code	Body seals	Body material	Body internals	Gasket material	temperature rating	temperature rating	
70°C max air	A	A, B	1	1	NEOP, FIBR	70°C	70°C	
177°C max air	В	В	1	1	FIBR	177°C	70°C	
204°C max air	С	В	1	1	FIBR	204°C	60°C	
Natural gas	1	A,B	1	1	NEOP, FIBR	70°C	70°C	

<u>Body seals</u> A - Buna-N B - Viton

Body material 1 - Cast iron Body internals 1 - Trim package 1 <u>Gasket material</u> FIBR - Hi temp fiber NEOP - Neoprene

Capacities - ball valves

	Flow Coefficient - Cv vs. % open										
Size	Insert	0.0%	11.1%	22.2%*	33.3%	44.4%	55.6%	66.7%	77.8%	88.9%	100%
	1/32" Slot	0.00	0.00	0.03	0.07	0.12	0.16	0.20	0.24	0.28	0.32
	1/16" Slot	0.00	0.01	0.07	0.20	0.33	0.46	0.60	0.73	0.86	1.00
0.5"	1/8" Slot	0.00	0.01	0.10	0.36	0.61	0.86	1.10	1.40	1.60	1.80
0.5	30°V	0.00	0.01	0.11	0.24	0.36	0.56	0.84	1.10	1.60	2.10
	60°V	0.00	0.01	0.12	0.33	0.60	0.84	1.40	2.00	3.10	4.40
	Round Port	0.00	0.15	0.29	0.46	0.70	1.10	1.80	2.60	4.30	6.40
	1/16" Slot	0.00	0.01	0.06	0.24	0.40	0.56	0.73	0.90	1.00	1.20
	1/8" Slot	0.00	0.01	0.14	0.39	0.65	0.90	1.20	1.40	1.70	1.90
0.75"	30°V	0.00	0.01	0.11	0.24	0.41	0.67	1.00	1.40	1.90	2.60
	60°V	0.00	0.01	0.13	0.36	0.55	1.00	1.50	2.30	3.60	5.00
	Round Port	0.00	0.21	0.43	0.70	1.10	1.60	2.60	4.00	6.40	9.60
	1/16" Slot	0.00	0.03	0.10	0.40	0.67	0.94	1.20	1.50	1.70	1.90
	3/16" Slot	0.00	0.03	0.22	0.82	1.40	1.90	2.50	3.10	3.50	4.00
1"	30°V	0.00	0.03	0.21	0.56	1.00	1.60	2.40	3.40	4.60	6.20
1	60°V	0.00	0.03	0.30	0.78	1.20	2.30	3.60	5.30	8.30	11.60
	90°V	0.00	0.03	0.48	1.20	2.30	3.50	5.40	7.70	10.80	12.10
	Round Port	0.00	0.58	1.20	1.90	2.80	4.30	7.00	10.50	17.00	26.00
	3/16" Slot	0.00	0.05	0.38	1.40	2.40	3.40	4.40	5.40	6.20	6.90
	30°V	0.00	0.05	0.39	1.00	1.80	2.90	4.40	6.40	8.60	11.40
1.25"	60°V	0.00	0.06	0.48	1.30	2.00	3.70	5.80	8.50	13.40	18.70
	90°V	0.00	0.06	0.78	2.00	3.70	5.70	8.80	12.50	17.50	19.70
	Round Port	0.00	0.91	1.80	3.00	4.40	6.70	10.90	16.40	26.60	40.60
	3/16" Slot	0.00	0.05	0.47	1.80	3.00	4.20	5.40	6.80	7.70	8.60
	30°V	0.00	0.05	0.41	1.20	2.10	3.50	5.20	7.60	10.30	13.70
1.5"	60°V	0.00	0.06	0.57	1.70	3.00	5.60	9.10	13.20	19.80	28.40
	90°V	0.00	0.06	1.00	2.80	4.50	8.10	13.40	19.70	30.90	47.10
	Round Port	0.00	1.50	3.00	4.80	7.20	11.00	18.00	27.00	44.00	65.50
	1/4" Slot	0.00	0.05	0.75	2.90	4.80	6.80	8.70	10.80	12.30	13.80
	30°V	0.00	0.05	0.55	1.70	3.40	5.70	8.30	12.10	16.60	22.20
2"	60°V	0.00	0.06	0.70	2.60	4.90	9.30	15.50	22.20	32.10	47.20
	90°V	0.00	0.06	0.88	3.30	6.10	11.70	19.40	27.50	40.10	59.00
	Round Port	0.00	2.20	4.30	7.00	10.50	16.20	26.40	39.60	64.00	96.00

*Select valves for minimum controllable Cv at 22°. Errors may become substantial below this point.

MATERIALS OF CONSTRUCTION

Butterfly valves

BUTTERFLY VALVE BODY ASSEMBLY - ALL SIZES



Item number	Description	Material specifications
1	Valve body sub-assembly	See page 2
2	Locating spring pin	Zinc plated carbon steel
3	Adapter bracket	ASTM B179 T6 aluminum
4 [1]	Socket head cap screw	Zinc plated carbon steel
5	Coupling	ASTM A582 type 303 stainless steel
6	Locking collar	Zinc plated alloy steel
7	Spring pin	Zinc plated carbon steel
8	Dowel pin	303 stainless steel
9	Hard stop screw	18-8 stainless steel
10	Hard stop nut	Stainless steel
11 [1]	Cover plate	Aluminum

[1] These items used only on sizes 1" through 4"

BUTTERFLY VALVE BODY SUB-ASSEMBLY - SIZES 1" THROUGH 4"



Body Materials						
Item No	Description		Materia	al Code		
		1	2	3	5	
1	Valve Body	Cast Iron ASTM A159 Gr. 3000	Carbon Steel ASTM A216 Gr. WCB	Brass ASTM B62 UNS No. C83600	Stainless Steel ASTM A351 Gr. CF8M	

Body Seals				
Item No.	Description	Material		
7	O-Ring	Standard material antions are		
8	O-Ring	Buna-N and Viton		
9	O-Ring			

	Trim Package Materials				
Item No	Description	Internal Trim Package			
nonn no.	Beeenpiion	1	2		
2	Valve Stem	303 Stainless Steel, A	ASTM A157 Gr. G3000		
3	Butterfly Disc	304 Stainless Steel (1.4301), ASTI	M A240 Type 304 UNS No. S30400		
4	Top Bushing	Bronze			
5	Bottom Bushing	ASTM B271, B505 and B584	PEEK		
6	Top Shim Bushing	UNS No. C93200			
10	Screw	18-8 Stainless Steel			
11	Washer	304 Stainless Steel (1.4301)			
12	Retaining Ring	316 Stain	less Steel		

BUTTERFLY VALVE BODY SUB-ASSEMBLY - SIZES 6" THROUGH 16"



Body Materials				
Item No	Description	Material Code		
nem No.	Description	1		
1	Valve Body	Cast Iron ASTM A159 Gr. 3000		

Body Seals					
Item No. Description Material					
6	O-Ring	Standard material option			
7	O-Ring	is Buna-N			

Trim Package Materials				
Item No	Description	Internal Trim Package		
nem vo.	Description	1	1	
	Valve Size	6" & 8"	10" through 16"	
2	Valve Stem	316 Stainless St	eel, ASTM A276	
3	Butterfly Disc	304 Stainless Steel (1.4301)	Carbon Steel	
	Butterny Disc	ASTM A167 UNS No. S30400	ASTM A108 UNS No. G10180	
4	Top & Bottom Bushing	Bro	nze	
5	Shim Bushing	ASTM B271, B505 and	B584 UNS No. C93200	
8	Screw	304 Stainless Steel (1.4301)	Zinc Plated Carbon Steel	
9	Washer	316 Stainless Steel	Zinc Plated Carbon Steel	
10	Retaining Ring	Carbor	n Steel	
11	Retaining Ring	SAE 1060-1090 UNS	No. G10600-G10900	
12	Pipe Plug	Alloy Steel, ASTM A322 UNS G40370		

Ball valves



Item number	Description	Material specification
1	Valve Body Sub-assembly	Based on selection on page 3
2	Bracket	6063-T6 Aluminum Alloy UNS A96063
3	Button Head Screw	18-8 (type 303) Stainless Steel
4	Coupling Collar	Zinc Plated Alloy Steel
5	Coupling	303 Stainless Steel ASTM A582 UNS No. S30300
6	Hard Stop Pin	420 Stainless Steel

DIMENSIONS AND WEIGHTS

Butterfly valves

1" SMARTLINK[®] Butterfly Valve









Flange Dimension "A" (in mm)				
Iron	Iron Threaded			
Stool	Threaded	80		
Sieei	Socket Welded	72		
Stainless Steel	Threaded	80		
	Socket Welded	72		
Brass	Threaded	71		

Approximate weight: 10 kg; w/flanges 11.8 kg

Fla	Flange Dimension "A" (in mm)													
Iron	Threaded	77.5												
Stool	Threaded	79												
Oleel	Socket Welded	77.5												
Stainless Steel	Threaded	80												
Stall liess Steel	Socket Welded	72												
Brass	Threaded	77.5												

Approximate weight: 11.3 kg; w/flanges 13 kg

	Dimensions in mm unless stated otherwise																
Size	В	С	D	Е	F	G	H NPT	I	J Ø	K Ø	L Ø	M Ø	Ν	0	Р	Q	R [1]
1.0	102	51	259	76	73.7	310	0.5	112	15.7	107	78.7	28	63.5	45°	33.3	25.4	15.7
1.25	102	51	259	89	81.3	323	0.5	112	15.7	127	89	35.6	68.6	45°	33.3	25.4	15.7

[1] M8 - 1.25 tap, 0.62 deep, 2 holes

1.25" SMARTLINK[®] Butterfly Valve











Flange Dimension "A" (in mm)											
Iron	Threaded	83									
Stool	Threaded	82									
Sleer	Socket Welded	82.3									
Stainless Steel	Threaded	82									
Stall liess Steel	Socket Welded	82.3									
Brass	Threaded	80									

Flange Dimension "A" (in mm)												
Iron	Threaded	87										
Steel	Threaded	90.4										
Steel	Socket Welded	89.2										
Staiplass Staal	Threaded	90.4										
Stall liess Steel	Socket Welded	89.2										
Brass	Threaded	94.5										

Approximate weight: 12.7 kg; w/flanges 15.4 kg

Approximate weight: 14 kg; w/flanges 17.7 kg

	Dimension in mm unless stated otherwise																
Size B C D E F G H I J K L M N O P Q [1]														R [1]			
1.5"	101.6	50.8	259	88.9	81.3	322.6	0.5	112	15.7	127	99	43.2	71.1	45°	33.3	25.4	15.7
2"	101.6	50.8	259	88.9	86.4	322.6	0.5	112	19	152.4	122	55.9	76.2	45°	42.9	25.4	15.7

[1] M8 - 1.25 tap, 0.62 deep, 2 holes

2" SMARTLINK[®] Butterfly Valve

2.5" SMARTLINK[®] Butterfly Valve









Flange Dimension "A" (in mm)											
Iron	Threaded	94.5									
Steel	Threaded	93.2									
UICCI	Socket Welded	96.3									
Stainless Steel	Threaded	93.2									
Otaliness Oteel	Socket Welded	96.3									
Brass	Threaded	96.5									

Flange Dimension "A" (in mm)												
Iron	Threaded	97.3										
Steel	Threaded	104.9										
Oleel	Socket Welded	102.4										
Stainloss Stool	Threaded	104.9										
Stall liess Steel	Socket Welded	102.4										
Brass	Threaded	102.1										

Approximate weight: 20 kg; w/flanges 28 kg

	Dimensions in mm unless stated otherwise																
Size	В	С	D	E	F	G	H NPT	I	J Ø	K Ø	L Ø	M Ø	N	0	Р	Q	R [1]
2.5"	101.6	50.8	259	101.6	106.7	335.3	0.5	111.8	19.1	190.5	139.7	66	96.5	45°	46	25.4	15.7
3"	101.6	50.8	259	101.6	106.7	335.3	0.5	111.8	19.1	190.5	152.4	83.8	96.5	45°	46	25.4	15.7

D

Е

мø

LØ

[1] M8 - 1.25 tap, 0.62 deep, 2 holes

6" SMARTLINK[®] Butterfly Valve





[1] Add 64 mm for high temperature (>70°C) configuration

Flange Dimension "A" (inmm)												
Iron	Threaded	104.9										
Steel	Threaded	103.1										
Oleel	Socket Welded	103.1										
Stainless Steel	Threaded	103.1										
Starriess Steel	Socket Welded	103.1										

Approximate weight: 22.2 kg; w/flanges 32.2 kg

Approximate weight: 24.9 kg; w/flanges 32.2 kg

	Dimensions in mm unless stated otherwise																		
Size	В	С	D	Е	F	G	H NPT	I	J	к Ø	L Ø	M Ø	Ν	0	Ρ	Q	R [2]	S	Т
4"	101.6	50.8	259	116.8	134.6	350.5	0.5	111.8	19.1	228.6	190.5	109.2	124.5	22.5°	52.3	25.4	15.7		
6"	101.6	50.8	259	149.8	150	383.5	0.5	111.8	[1]	226.1	196.9	154.9	154.9	60°	25.4	76.2	11.1	38.1	109.2

[1] 1/2-13 UNC, 6 holes [2] For 4" Valve: M8-1.25 tap, 0.62 deep, 2 holes. For 6" Valve: 1/2-13 UNC, 4 holes

10" SMARTLINK[®] Butterfly Valve





[1] Add $\,$ 64 mm for high temperature $\,$ (>70°C) configuration

[1] Add 64 mm for high temperature (>70°C) configuration

Note: Flanges are shipped loose.

¢ [1]

Approximate weight: 27.7 kg; w/flanges 41.3 kg

Approximate weight: 29.9 kg; w/flanges 63 kg

	Dimensions in mm unless stated otherwise																				
Size	А	В	С	D	Е	F	G	Н	I NPT	J	K Ø	L	М	Ν	0 Ø	P Ø	Q	R	S [3]	Т	U Ø
8"	101.6	50.8	259	177.8	188	38.1	111.8	411.5	0.5	111.8	260.4	27.9	193	[1]	203.2	299.7	60°	25.4	11.1	76.2	
10"	101.6	50.8	259	233.7	193	63.5	165	467.4	0.5	111.8	360.7	91.4	213.4	[2]	254	406.4		25.4	11.1	76.2	330

[1] 1/2-13 UNC, 6 holes

[2] 1.0 diameter, 12 holes[3] 0.438 deep, 4 holes



14" SMARTLINK[®] Butterfly Valve



[1] Add 64 mm for high temperature (>70°C) configuration

Note: Flanges are shipped loose.

Approximate weight: 34.9 kg; w/flanges 89.4 kg

[1] Add 64 mm for high temperature (>70°C) configuration

Note: Flanges are shipped loose.

Approximate weight: 49.4 kg; w/flanges 120.7 kg

							Dime	nsions	in mm	unles	s state	d othe	rwise							
Sizo	•	B	<u> </u>		F	F	G	Ц	I		K	I	М	Ν	0	Р	B	S	T	U
OIZE						1	u		NPT		Ø	L.	IVI	Ø	Ø	Ø	11	[1]		Ø
12"	101.6	50.8	259	259	221	76.2	193	492.8	0.5	111.8	431.8	116.8	241.3	25.4	304.8	482.6	25.4	11.1	76.2	406.4
14"	101.6	50.8	259	289.6	243.8	76.2	193	523.2	0.5	111.8	477.5	147.3	266.7	27.9	335.3	533.4	25.4	11.1	76.2	442
[1] 0.4	138 dee	p, 4 hol	es																	



[1] Add 64 mm for high temperature (>70°C) configuration

Note: Flanges are shipped loose.

Approximate weight: 60.8 kg; w/flanges 155.6 kg

							Din	nensio	ns in r	nm un	less st	ated o	therwi	se						
<u>.</u>		_	~	_	_	_				.	K	.		N	0	P	_	S	-	U
Size	A	В	С	D	E	F	G	н	NIDT	J	~	L	M	~	Ä	Â	R	F4.1		ā
									NPT		0			0	0	0		[1]		Ø
16"	101.6	50.8	259	309.9	266.7	76.2	205.7	543.6	0.5	111.8	538.5	167.6	289.6	28.4	381	596.9	25.4	11.1	76.2	492.8
[1] A	100 doc	n 4h																		

[1] 0.438 deep, 4 holes

Ball valves



						Dim	ension	s inmm	unless	stated	otherw	rise						
Size	A	В	С	D	E	F	G	H oct.	I	J	к	L	M Ø	N Ø	0 Ø	Р	Q	R
0.5"	101.6	50.8	275	249	111.3	48	50.8	30.5	25.4	50.8	36.8	73.7	88.9	60.5	15.7	45°	53.8	108



						Dime	ensions	in mm	unless	stated	otherw	ise						
Size	A	В	С	D	E	F	G	H oct.	I	J	к	L	M Ø	N Ø	0 Ø	Р	Q	R
0.75"	101.6	50.8	276.9	250.7	111.3	48	53.3	35.6	26.4	52.8	40.6	81.3	98.6	69.9	15.7	45°	58.7	117.3



						Dimer	isions i	n mm u	inless s	tated o	therwis	е						
Size	A	В	С	D	Е	F	G	H oct.	I	J	к	L	M Ø	N Ø	0 Ø	Ρ	Q	R
1"	101.6	50.8	283	256.8	111.3	48	66	43.2	31.8	63.5	49.5	99.1	107.9	79.2	15.7	45°	63.5	127



							Dim	ensior	ns in m	m unle	ess sta	ated ot	herwis	e						
Size	Α	В	С	D	E	F	G	н	I	J	К	L	М	N oct.	0 Ø	P Ø	Q Ø	R	S	т
1.25"	101.6	50.8	281	255	111	48	74	49	37	38	76	56	112	53	89	16	117	45°	70	140



							Dime	ension	s in m	m unle	ess sta	ated ot	herwis	se						
Size	A	В	С	D	E	F	G	н	I	J	К	L	М	N oct.	0 Ø	P Ø	Q Ø	R	S	Т
1.5"	101.6	50.8	287	261	111	48	85	49	43	43	86	60	119	58	99	16	127	45°	83	165



						Dir	nensio	ons in	mm ur	nless s	tated	otherw	/ise							
Size	Α	В	С	D	E	F	G	н	I	J	к	L	м	N oct.	0 Ø	P Ø	Q Ø	R	S	Т
2"	101.6	50.8	293	266	111	48	95	49	49	48	97	70	140	71	121	19	152	45°	89	178

Control actuator



				Dir	mensions	in mm un	less state	d otherwis	se 🛛				
A	В	С	D	Е	F	G	Н	I	J	K	LØ	М	N
101.6	50.8	256	168.9	62.5	13.7	32.8	63.5	127	50.8	25.4	25.4	111.3	47.8

				Dime	nsions in n	nm unless	stated othe	erwise				
0	Р	Q	R	S	тø	U	V	W	Х	Y	Z	AA
44.5	88.9	6.35	6.35	12.7	25.4	50.8	25.4	9.5	9.5	19.1	25.4	50.8

Control interface



C)imensions in mm ur	less stated otherwis	se							
A B C Weight (kg)										
25.4 116.1 115.1 0.5										

DIN rail assembly

(MAXIMUM OPTIONS SHOWN)

- 1) Terminal blocks
- 2) DIN rail end stop (5)
- 3) 4.0 amp circuit breaker
- 4) 120VAC relays (optional) 2 max.
- 5) 24VDC relay (optional) 5 max.
- 6) Control interface
- 7) TS 35X15 high rise slotted DIN rail
- 8) 24VDC power
- 9) Actuator network
- 10) 4 to 20 mA I/O
- 11) 24VDC 2.3A power supply (optional)
- 12) Relay output contacts
- 13) Relay input contacts
- 14) 120VAC power



Dimensions	s in mm unless stated oth	erwise						
A B Weight (kg)								
338	410	2.3						

Interface panel

(MAXIMUM OPTIONS SHOWN)



Dimensions in mm unless stated otherwise						
A	В	С	D	E	F	Weight (kg)
368	184	584	546	508	32	18

INSTALLATION INSTRUCTIONS

Please read the operating and mounting instructions before using the equipment. Install the equipment in compliance with the prevailing regulations.

Bedrijfs- en montagehandleiding voor gebruik goed lezen! Apparaat moet volgens de geldende voorschriften worden geïnstalleerd.

Lire les instructions de montage et de service avant utilisation! L'appareil doit imperativement être installé selon les règlementations en vigueur.

Betriebs- und Montageanleitung vor Gebrauch lesen! Gerät muß nach den geltenden Vorschriften installiert werden.

Mechanical installation

REQUIRED COMPONENTS The minimum SMARTLINK[®] system requires 1 Control Interface and 1 Valve Actuator assembly.

OPTIONAL COMPONENTS

DIN rail-mounted interface relays, 24VDC supply, terminal block assembly, a pre-wired DIN rail assembly and a NEMA 4 enclosed panel are all options available from MAXON.

Mechanical installation of the SMARTLINK[®] Intelligent Valve and Actuator Assembly requires the following:

- Mount the SMARTLINK® Control Interface along with any optional interface relays on a DIN rail within an appropriate electrical enclosure or cabinet, and
- Install the SMARTLINK[®] Valve Actuator assembly in any orientation within the pipe train.

Electrical installation

SYSTEM WIRING REQUIREMENTS

The system block diagram below indicates the sources and destinations of the electrical wiring required by the SMARTLINK® Control Interface and Actuator assembly.

SYSTEM BLOCK DIAGRAM



The basic electrical installation requires the following wiring:

- Low voltage 4-20mA signal wiring from the user's process controller to the SMARTLINK[®] Control Interface. Wiring of the 4-20mA position feedback signal is optional and may not be needed for specific applications.
- Communications wiring between the SMARTLINK® Control Interface and Valve Actuator.
- Low-voltage supply wiring between a 24VDC supply and the SMARTLINK® Control Interface. A pre-wired MAXON DIN Rail Assembly can be supplied that includes this wiring.
- Low voltage DC relay coil wiring from the SMARTLINK[®] Control Interface to output interface relays. All interface relays are optional. A pre-wired MAXON DIN Rail Assembly can be supplied that includes this wiring to the relays.
- 120/230 VAC input relay wiring from the user's process controller to the optional input relays. This wiring is not required if input interface relays are not used by the application. A pre-wired MAXON DIN rail assembly can be supplied that includes the relays and the wiring.
- Low voltage DC relay contact input wiring from the input relay contacts to the Control Interface.
- **120/230 VAC output relay wiring** from the output interface relay contacts to the user's process control equipment. This wiring is not required if output interface relays are not required for the application.
- 120/230 VAC supply wiring between a user's fused power source and the 24VDC power supply.

Electrical wiring should be performed in accordance with all local and NEC 1 codes. See Reference Table 1 (page 46)and Table 2 (page 47) for summarises of all of the input/output terminals for the Control Interface and Valve Actuator. Reference Table 3 (page 47) summarizes the maximum wiring length, type, and size for all terminations.

Typical wiring diagram of a SMARTLINK[®] Valve Actuator Assembly is shown on page 34.

If the Control Interface is shipped as part of the MAXON pre-wired DIN rail assembly, the electrical installation is simplified because the 24VDC power supply and interface relays are provided and wired to the Control Interface. The electrical installation for the pre-wired DIN rail assembly requires the following:

- Low voltage 4-20mA signal wiring from the user's process controller to the SMARTLINK™ DIN rail assembly. Wiring of the 4-20mA position feedback signal is optional.
- Communications wiring between the SMARTLINK™ Control Interface and Valve Actuator.
- **120/230 VAC input relay wiring** from the user's process controller to the optional input relays. This wiring is not required if input interface relays are not used by the application.
- 120/230 VAC output relay wiring from the output interface relay contacts to the user's process control equipment. This wiring is not
 required if output interface relays are not required.
- 20/230 VAC supply wiring between a user's fused power source and the 24VDC power supply.

All electrical wiring should be performed in accordance with all local and NEC 1 codes. Reference Table 4 (page 48) summarizes all of the input/output terminals for the DIN rail assembly and Reference Table 5 (page 49) summarizes the maximum wiring length, type, and size for all DIN rail assembly terminations.

TYPICAL WIRING SCHEMATIC (SEE NOTE 2 BELOW)



Note 1: Recommended wire color code for SMARTLINK®

Component terminal	Cable				
designation	Maxon #59829	Belden #3086A			
doolgriddorf	(not to exceed 100 ft)	(not to exceed 300 ft.)			
F24 / +24	white / orange	brown			
FCOM / GND	orange	blue			
DA	white / blue	white			
DB	blue	black			

Note 2: This wiring schematic represents electrical connections in a typical product application. Please refer to the schematic of the specific application for troubleshooting.

OPERATING INSTRUCTIONS

Instructions provided by the company or individual responsible for the manufacture and/or overall installation of a complete system incorporating MAXON products take precedence over the installation and operating instructions provided by MAXON. If any of the instructions provided by MAXON are in conflict with local codes or regulations, please contact MAXON before initial start-up of equipment.



Read the instruction manual carefully before initiating the start-up and adjustment procedure. Verify that all of the equipment associated with and necessary to the safe operation of the system have been installed correctly, that all pre-commissioning checks have been carried out successfully and that all safety-related aspects of the installation are properly addressed.

The installer should perform the following commissioning steps for the SMARTLINK[®] Control Interface and Actuator Assembly:

- · Wiring checkout prior to applying power
- Operational checkout after applying power
- System configuration <u>if required</u> by the application
- Valve characterization <u>if required</u> by the application

Control interface



MAN Light - Unit in Manual Positioning Mode when lit. RUN Light - Unit in Run Mode when lit; Unit in Position Setup Mode when RUN or MAN lights are <u>both blinking</u>. ALM Light - Alarm exists when lit; Unit is locked if blinking.

0 - 9 Lights - Indicates valve position index when unit is in Manual or Position Setup Mode; Also indicates command number selected by rotary CMD SEL switch, configuration settings, alarm codes and lock passcodes.

• ENTER Switch - Momentary pushbutton for command entry and saving configuration or valve position changes.

MODE Switch - 3 positions: (1) <u>RUN</u> (down) places unit in Run Mode which positions valve by 4-20mA input, (2) <u>Command Entry</u> (middle) for selecting user command with rotary switch, and (3) <u>CMD abc</u> (up, with momentary action) for command set selection.

 ADJUST Switch - 3 positions: (1) <u>STANDBY</u> (down) for emergency valve movement to its standby position when unit is not in Run Mode, (2) <u>ADJ</u> (middle) enables valve movement in tenth degree steps when using the INC/DEC switch in Manual and Position Setup Mode, and (3) <u>INDEX</u> enables valve positioning moves to the 19 position indexes when using the INC/DEC switch in Manual Mode.

INC/DEC Switch - 3 positions: INC and DEC (up & down, with momentary action) for valve opening and closing in Manual or Position Setup Mode; also used for changing configuration settings. Middle position has no function.

Command Set Lights - Identifies which command set (a, b, or c) is currently selected (when blinking) or active (when not blinking).

CMD SEL (Rotary) Switch - Selects command number, 0 thru 7.

Wiring checkout

Before applying power to the SMARTLINK[®] Control Interface and SMARTLINK[®] Valve Actuator Assembly, perform the following wiring checkout:

- 1. Verify that 120 VAC is <u>not</u> connected directly to SMARTLINK[®] Control Interface and Valve Actuator Assembly. Both devices are powered by a 24VDC supply. All output interface relay wiring from the Control Interface is connected to 24VDC relay coils.
- 2. Verify the proper wire type and maximum wire length requirements are satisfied for all connections.
- 3. Verify color code connections are correct on the 24V/Data Connector of both the Control Interface and Valve Actuator Assembly.
- 4. Measure the resistance between earth ground at the user's panel enclosing the Control Interface and each of the four signals wired to the Valve Actuator: F24 (Field +24VDC), FCOM (Field Common), DA (Data-A), and DB (Data-B). The resistance should indicate an open circuit (i.e., a resistance value greater than 106 Ohms). If an open circuit is not measured, damage or incorrect wiring of the control network cable exists and must be corrected.
- 5. Verify proper termination of shields for the 4-20mA cables and the control cable between the Control Interface and Valve Actuator Assembly.
- 6. If MAXON SMARTLINK[®] Interface Relays are not provided with the Control Interface, verify that all required relays have a coil rating less than 30VDC and 100mA. The output interface relay coils are connected to the Control Interface, RO1 through RO5 terminals of the Relay Output driver connector.

Refer to SMARTLINK[®] Reference Tables 1 through 5 (page 46 through page 49) for all termination definitions and wiring/shielding requirements.

Maintain the integrity of the MAXON enclosure by using NEMA 4 or IP66 rated dust- and water-tight electrical connectors. Use cablesealing grips and strain-relief loops for any cord or cable. Use internal sealing materials on all conduit connections. Moisture can have a harmful effect on device internals if permitted to enter through wiring connectors. Ensure that the device connection is not at a low point of the conduit to avoid condensation run-off into the housing; install a drip loop if necessary. Make sure that the access cover plate is in place and securely fastened. All cover screws should be tightened using an alternate cross-corner tightening pattern. Cover screws should be checked periodically to ensure adequate sealing protection.

Operational checkout

Apply power to the SMARTLINK[®] Control Interface and SMARTLINK[®] Valve Actuator Assembly and perform the following operational checkout:

- 1. Verify the Control Interface Alarm light is off and the Run light is on after powering up the system. If the alarm light is on, see page 43 to determine the cause of the alarm and corrective actions.
- 2. Place the user's process controller into manual mode or temporarily replace the 4-20mA position command with a simulated 4-20mA current loop. With the Control Interface command switch in the "RUN" position, move the position command signal slowly from 4mA to 20mA and verify valve movement. The position of the valve can be visually observed by the "OPEN" or "CLOSED" markings on the machined coupling that connects the actuator to the valve shaft. If the application requires the 4-20mA position feedback signal, measure this feedback current loop while changing the position command and verify that the two currents (input vs. output) are approximately equal after pausing at several intermediate positions.
- 3. If the process controller cannot be placed in manual mode or if a simulated command signal cannot be produced, the SMARTLINK[®] assembly can be placed in a local manual mode. (Refer to Command A-0 and the general command entry instructions on page 37). Once the system is in manual mode, drive the valve to its full open and closed positions using the INC/DEC switch on the Control Interface.
- 4. If installed, verify operation of each output interface relay by measuring the presence and disappearance of voltage on the relay's contact. If a DIN Rail Assembly is supplied with the Control Interface, the terminals for each relay contact are shown in Reference Table 6 on page 50. The Control Interface relay driver output terminals are also provided in Reference Table 6 to assist in testing of interface relays when not supplied and pre-wired by MAXON.

Do not remove power from an air valve actuator when both 1) the valve is open more than 30 degrees, and 2) the blower is running. Prior to power loss, ensure that the valve position is less than 30 degrees open, and/or that the blower has stopped. Failure to observe these precautions can result in permanent damage to the valve actuator.

User commands

There are 3 SMARTLINK[®] command sets (a, b, and c) as listed below. Entry requirements for each command (if applicable) are listed at right. Detailed descriptions of the following user commands are shown in Reference Tables 8 through 10 (page 52 through page 57).

Command Set "A"	 A-0 Enter Manual Positioning Mode Position command <= 4 mA A-1 Display Alarm Codes A-2 Enter Valve Position Setup Mode Position command = 4 to 20 mA A-3 Reserved for future use A-4 Reserved for future use A-5 Set Max Position and Min/Max Ramp Position command = 20 mA
	A-6 Set Min Position and Min/Max Ramp Position command = 4 mA A-7 Unlock Valve Configuration Unit must be "locked"
Command Set "B"	 B-0 Select Loss of Signal Position B-1 Reserved for future use B-2 Select Standby Position B-3 Select Deadband B-4 Set High Limit Position Threshold Unit in Manual Mode B-5 Set Low Limit Position ThresholdUnit in Manual Mode B-6 Set Auto Ramp Adjust On/Off B-7 Reserved for future use
Command Set "C"	C-0 Check Valve CalibrationFor MAXON-trained technician only C-1 Calibrate Valve For MAXON-trained technician only C-2 Enable Valve Calibration / Check For MAXON-trained technician only C-3 Reset Factory Default Settings Unit in Position Setup Mode C-4 Enter New Lock Combination Unit "unlocked" to modify C-5 Select Lock Enable / Disable Unit "unlocked" to modify C-6 Save Profile as Backup C-7 Restore Backup Profile Unit in Position Setup Mode

GENERAL COMMAND ENTRY INSTRUCTIONS:

- 1. A user command can be performed only when the following conditions are all satisfied:
 - a) MODE switch is not in the RUN position,
 - b) one of the green command set lights (a, b, c) is <u>blinking</u>,
 - c) ADJUST switch is not in the STANDBY position, and

d) unit is "unlocked". (Condition 'd' is not required for Command A-7, Unlock Valve Configuration and Command A-1, Display Alarm Codes.)

e) For some commands, the unit must be in a specific mode or have the correct 4-20 mA command signal (see command entry requirements listed above or in Reference Tables 8 through 10 on page 52 through page 57).

- 2. If the a, b, or c command set light is not blinking, momentarily push the MODE switch in the CMD abc position (up) or, change the position of the rotary CMD SEL switch. This will start the command set light blinking and permit a command to be entered.
- 3. Select the desired command set by momentarily pushing the MODE switch upward to the CMD abc position. Subsequent CMD abc switch entries will change the command set selection as indicated by the green command set (a, b, c) lights.
- 4. Select the desired command number by changing the position of the rotary CMD SEL switch. When one of the command set lights is blinking, the command number selected is indicated by the corresponding numbered (0-9) light being lit.
- 5. After the command set and number are selected, press the ENTER button. If all of the numbered lights flash momentarily after the ENTER button is pushed, a command entry error has occurred and the command was not executed. If an entry error occurs, check if the unit is locked (i.e. alarm light blinking) or the ADJUST switch is in the STANDBY position. If neither condition exists, check the specific entry requirements of the command.

SYSTEM CONFIGURATION

There are 8 SMARTLINK[®] configuration settings that can be changed through execution of the commands below, using the switches and lights on the Control Interface. Detailed explanations of each setting appear in Reference Table 7: SMARTLINK[™] System Configuration Summary on page 51.

Command Name	Command Number	Factory Default
Select LOS Position	B-0	No position change
Select Standby Position	B-2	Position Index 0
Select Control Deadband	B-3	0.06% Deadband
Set High Limit Position Threshold	B-4	80.0 degrees
Set Low Limit Position Threshold	B-5	0.0 degrees
Set Auto Ramp Adjust On/Off	B-6	Auto Ramp ON
Enter New Lock Combination	C-4	Passcode: 0, 0, 0, 0
Select Lock Enable/Disable	C-5	Lock Disable

Review the factory default settings before changing any of the system configuration settings; in many applications, modification of the default settings is not necessary. If a setting does need to be changed, follow the procedure outlined below.

- 1. Select and enter the required system configuration command.
- 2. After the command is entered, one of the numbered (0-9) lights will be on, indicating the current configuration setting. (For example: If the lock configuration is set to #0, Lock Disable, the 0 light will be solidly lit after Command C-5, Lock Enable/Disable, is entered successfully.)
- 3. Select the desired configuration setting by using the INC/DEC switch. As the INC/DEC switch is momentarily pushed up or down, the selected setting changes as indicated by turning on the corresponding numbered light (0-9).
- 4. Push the ENTER button after the desired configuration setting is selected. The numbered light that is lit to indicate the selected configuration will momentarily turn off indicating the command is complete and the configuration setting is saved.
- 5. To confirm the correct setting is saved, re-enter the command and verify the new setting by the numbered light (0-9) indication.

Valve characterization

Valve characterization is necessary for changing the relationship between valve position and the 4-20mA position command. This process permits field adjustment of the "installed" valve characteristic without mechanically adjusting the valve or external linkages.

The SMARTLINK[®] is pre-set to a linear slope, but can be customized using either the 10 Point Characterization procedure or the 19 Point Characterization procedure.

10 POINT CHARACTERIZATION

SMARTLINK[®] is shipped with the configuration setting to easily adjust valve positions at 10 of the 19 position indexes and automatically set the positions at the other 9 (intermediate) indexes.

- 1. Place the process controller that commands SMARTLINK[®] in manual mode and connect a 4-digit current meter on the 4-20mA position output. Execute Command B-6 and verify the Auto Ramp function is set to #1, Auto Ramp ON. If not set correctly, refer to page 38 or Reference Table 7 on page 51.
- Execute Command A-2, Enter Position Setup Mode. In this mode, both the yellow and green run lights will be flashing. The position command signal determines which of the 19 position indexes can be modified as shown by the blinking numbered lights. Move the process controller's output to either 0% (Index #0) or 100% (Index #9) to begin characterization.
- 3. With the ADJUST switch in the middle (ADJ) position, push the INC/DEC switch up or down to change the valve position. Each push of the INC/DEC switch moves the valve 0.1 degrees. If the switch is held in the up or down position for more than 3 seconds, the valve will move in 0.5-degree steps up to a total travel of 8 degrees from the stored valve position. (All the numbered lights will momentarily flash when this 8-degree limit is reached.) After moving the valve to the desired position, press the ENTER button to save the position setting. Record the valve position feedback in mA or %.
- 4. Move the controller's output to the % or mA setting in the commissioning table (shown on page 40) for each consecutive <u>whole digit</u> index and repeat the adjustment procedure in Step 3. With the auto ramp function ON, adjustment at only the 10 whole digit indexes is necessary because positions at the intermediate indexes (0.5, 1.5, etc.) are automatically set to a value half way between the positions of the whole number indexes (0, 1, 2, etc).
- 5. Execute Command C-6 to save the profile as a backup. Move the MODE switch to the RUN position and put the user's process controller in AUTO.

19 POINT CHARACTERIZATION

There are applications that require precision adjustment throughout the actuator's control range. For these applications, adjustment of all 19 positions is necessary using the procedure below.

- 1. Place the process controller that commands SMARTLINK[®] in manual mode and connect a 4-digit current meter on the 4-20mA position output. Execute Command B-6 and set the auto ramp function to setting #0, Auto Ramp OFF. (Refer to page 38 or the Reference Table 7 on page 51 for changing configuration settings.)
- 2. Execute Command A-2, Enter Position Setup Mode. In this mode, both the yellow and green run lights will be flashing. The position command signal determines which of the 19 position indexes can be modified as shown by the blinking numbered lights. Move the process controller's output to either 0% (Index #0) or 100% (Index #9) to begin characterization.
- 3. With the ADJUST switch in the middle (ADJ) position, push the INC/DEC switch up or down to change the valve position. Each push of the INC/DEC switch moves the valve 0.1 degrees. If the switch is held in the up or down position for more than 3 seconds, the valve will move in 0.5-degree steps up to a total travel of 8 degrees from the stored valve position. (All the numbered lights will momentarily flash when this 8-degree limit is reached.) After moving the valve to the desired position, press the ENTER button to save the position setting. Record the valve position feedback in mA or %.
- 4. Move the controller's output to the next % or mA setting in the commissioning table (shown on page 40) and repeat the adjustment procedure in Step 3 for all 19 position indexes. With the auto ramp function OFF, the positions of adjacent indexes are not automatically ramped. Therefore, all 19 position indexes should be visited during this procedure and adjusted if necessary.
- 5. Execute Command C-6 to save the profile as a backup. Move the MODE switch to the RUN position and put the user's process controller in AUTO.

If an unsafe operating condition is observed while characterizing the SMARTLINK[®] in a parallel positioning combustion application, follow the instructions below:

- 1. When SMARTLINK[®] is in the Position Setup Mode for valve characterization, the ADJUST switch can be pushed to the STANDBY position (down). This action will immediately move the valve to the Standby position, overriding the 4-20mA position command.
- The factory default Standby position is the valve position at Index #0, the minimum position in the profile. While the ADJUST switch is in this position, no commands can be executed. The Standby position function is inhibited when the MODE switch is in the RUN position (down).

MAXON SMARTLINK[®] commissioning table

(SHOULD BE COMPLETED AT TIME OF INSTALLATION)

Serial No. / Install Date:____

Position index	Interface output (light #'s)	Position command (%)	Position command (mA)	Custom position (% or mA)	Factory default (degs)	Field readings ("wc, 02%, etc.)
0	0	00.00%	4.000		0.0	
0.5	0, 1	05.56%	4.889		4.4	
1	1	11.11%	5.778		8.9	
1.5	1, 2	16.67%	6.667		13.3	
2	2	22.22%	7.556		17.8	
2.5	2, 3	27.78%	8.444		22.2	
3	3	33.33%	9.333		26.7	
3.5	3, 4	38.89%	10.222		31.1	
4	4	44.44%	11.111		35.6	
4.5	4,5	50.00%	12.000		40.0	
5	5	55.56%	12.889		44.4	
5.5	5, 6	61.11%	13.778		48.9	
6	6	66.67%	14.667		53.3	
6.5	6, 7	72.22%	15.556		57.8	
7	7	77.78%	16.444		62.2	
7.5	7, 8	83.33%	17.333		66.7	
8	8	88.89%	18.222		71.1	
8.5	8, 9	94.44%	19.111		75.6	
9	9	100.00%	20.000		80.0	
Low limit					00.0	
High limit					80.0	

Configuration command name (& number)	Factory default (& configuration setting number)	Field configuration setting
Select Loss of Signal (LOS) Position (B-0)	No Position Change (#4)	
Select Standby Position (B-2)	Position Index 0 (#0)	
Select Control Deadband (B-3)	0.06% Deadband (#2)	
Set High Limit Position Threshold (B-4)	80.0 degrees (N/A)	
Set Low Limit Position Threshold (B-5)	0.0 degrees (N/A)	
Set Auto Ramp Adjust ON/OFF (B-6)	Auto Ramp ON (#1)	
Enter New Lock Passcode (C-4)	Passcode: 0,0,0,0 (N/A)	
Select Lock Enable/Disable (C-5)	Lock Disable (#0)	

Unit locking and passcode entry

The SMARTLINK[®] Control Interface is shipped with the lock function disabled and a factory default 4-digit passcode or "combination" of 0,0,0,0. To lock the unit for the first time and change the default passcode, the lock function must first be enabled (Command C-5) and the default passcode entered (Command A-7) as described in the first two procedures below. After the lock function is enabled and the unit is "unlocked", a new passcode can be entered using Command C-4 as described in the procedure below. If you forget the passcode, call MAXON for the "master" passcode.

ENABLING THE "LOCK" CONFIGURATION SETTING (COMMAND C-5):

- 1. If the alarm light is blinking, the lock function is already enabled and the unit is in a "locked" state. Before changing the passcode, the unit must be unlocked by entering the current passcode (Command A-7) using the procedure below.
- 2. If the alarm light is not blinking, select and enter Command C-5, Lock Enable/Disable.
- 3. After the command is entered, one of the numbered (0-9) lights will be on, indicating the current configuration setting. If the #1 light is on, the lock function is already enabled and the procedure below can be performed to change the passcode. If the #0 light is on, the lock function is disabled.
- 4. To select the #1 setting (Lock Enable), momentarily push the INC/DEC switch in the up position. The #1 light will now be on, indicating the new setting is selected.
- 5. Push the ENTER button. The #1 light will turn off indicating the command is complete and the configuration setting is saved. The unit is now locked and the alarm light will be blinking.
- 6. To change the current passcode, perform the next two procedures (Command A-7 & C-4).

ENTERING THE CURRENT "LOCK" PASSCODE (COMMAND A-7):

- 1. Select and enter Command A-7, Unlock Valve Configuration.
- 2. After the command is entered, the INC/DEC switch is used to select the first passcode digit. The digit selected is indicated by a numbered light (0-9).
- 3. Once the first digit of the passcode is selected, push the ENTER button once. The numbered light should momentarily turn off indicating the entry was accepted.
- 4. Repeat steps 2 and 3 for the 2nd, 3rd, and 4th passcode digits. If the passcode was entered incorrectly, all the numbered lights will momentarily flash after entry of the 4th and final passcode digit. If the passcode was correct, the alarm light will stop flashing and will be turned off completely if no other alarms exist.
- 5. To change the current passcode, perform the procedure (Command C-4) below.

ENTERING A NEW "LOCK" PASSCODE (COMMAND C-4):

- 1. To enter a new lock passcode, the lock function must be enabled (Command C-5) and the current passcode must be entered (i.e. the unit must be "unlocked" using Command A-7). See the two previous procedures if these command entry requirements have not been satisfied.
- 2. Select and enter Command C-4, Enter New Lock Combination.
- 3. After the command is entered, the INC/DEC switch is used to select the first new passcode digit. The digit selected is indicated by a numbered light (0-9).
- 4. Once the first new digit of the passcode is selected, push the ENTER button once. The numbered light should momentarily turn off indicating the entry was accepted. Write down the new digit for later use.
- 5. Repeat steps 3 and 4 for the 2rd, 3rd, and 4th passcode digits, remembering to write down each passcode digit as it is entered.
- 6. Verify the new passcode by re-locking the unit (MODE switch to the RUN position and then back to the middle, Command Entry position), and entering the new passcode using Command A-7 as described in the procedure above.

Manual operation

Command A-0, Enter Manual Positioning Mode, is used to override the 4-20 mA position command input. (*This command should not be used when the valve is in an operating process that requires continuous positioning based on the 4-20 mA input signal.*)

ENTERING MANUAL POSITIONING MODE (COMMAND A-0):

- 1. To enter the Manual Positioning Mode, the position command input signal must be first driven to 4mA or less.
- Select and enter Command A-0, Enter Manual Positioning Mode. If the numbered lights flash momentarily after entering Command A-0: a) the position command may not be less than 4 mA, b) the adjustment mode switch may be in the STANDBY position, or c) unit may be "locked" to prevent tampering.
- 3. After entering the command, the yellow manual (MAN) light will be on and RO5 (Relay Output driver #5) will energize the Manual Control relay (if installed). The INC/DEC switch can be used to move the valve open or closed. If the adjustment mode switch is in the INDEX position, the INC/DEC switch is used to move between the 19 position "indexes". If the adjustment mode switch is in the ADJ position, pushing the INC/DEC switch up or down changes the valve position in 1.0 degree steps. If the INC/DEC switch is held in the up or down position, the position is continuously adjusted until the maximum or minimum position is reached. When the max or min position setpoint is reached, all the numbered lights will momentarily flash.

This command should not be executed when the valve is part of an operating process that requires continuous, closed-loop valve positioning.

4. To return control back to the 4-20 mA position command input, move the MODE switch to the RUN position (down).

High and low valve position limits

The high and low limits are automatically set when the user adjusts the maximum (Index #19) and minimum (Index #0) valve position settings. If different high and low limits are required (other than the default or automatically set limits), Command B-4 and Command B-5 can be executed using the procedure below.

Command B-4 is a configuration command that is used to adjust the high limit position threshold. Relay driver Output #3, RO3 will energize the optional High Position Limit relay when the valve position is equal to or greater than the stored high limit position threshold. The high limit threshold has a factory default of 80.0 degrees and is automatically set to 1.0 degree less than the maximum valve position when modified using Command A-2, Enter Position Setup Mode, or A-5, Set Max Position & Min/Max Ramp. If the factory default or automatic 1.0 degree offset is acceptable, execution of Command B-4 is not necessary.

Command B-5 is a configuration command that is used to adjust the low limit position threshold. Relay driver Output #4, RO4 will energize the optional Low Position Limit relay when the valve position is less than or equal to the stored low limit position threshold. The low limit threshold has a factory default of 0.0 degrees and is automatically set to 1.0 degree above the minimum valve position when modified using Command A-2, Enter Position Setup Mode, or A-6, Set Min Position & Min/Max Ramp. If the factory default or automatic 1.0 degree offset is acceptable, execution of Command B-5 is not necessary.

MANUALLY ADJUSTING THE HIGH OR LOW LIMIT POSITION THRESHOLD (COMMAND B-4 OR B-5):

- 1. Before entering Command B-4 (or B-5), the unit must be in the Manual Positioning Mode (Execute Command A-0, as described on page 42 or in Reference Table 8 on page 52).
- 2. With the unit in Manual Positioning Mode (as indicated by the yellow, MAN light on) and the ADJUST switch in the "ADJ" middle position, select and enter Command B-4 (or B-5). After command entry, the valve will be driven to the high (or low) limit position.
- 3. To change the valve position in +/- 1.0 degree steps, momentarily push the INC/DEC switch up or down. If the INC/DEC switch is held in the up or down position, the valve position setpoint is continuously changed in +/- 1.0 degree steps.
- 4. After moving the value to the desired high (or low) limit position, push the ENTER button to save the new setting. When the ENTER button is pressed, the numbered light(s) and command set "b" light will momentarily turn off, indicating the new value has been stored.
- 5. To return control back to the 4-20mA position command input, move the MODE switch to the RUN position (down). The unit is now in RUN mode.

Alarm codes

If the alarm light of the Control Interface is on or flashing, view the alarm condition by executing Command A-1, Display Alarm Codes. After command entry, the INC/DEC switch is used to scroll through the alarm codes. The cause of the alarm can be determined by observing the numbered lights turned on and matching the light pattern to a table entry below.

Alarm Code (Lights ON)	Alarm Name	Alarm Description, Possible Cause and Corrective Action
Actuator Alarm Light # Pattern		
0, 1	Position Overshoot	Actuator detected problem with position control. If alarm persists, replace valve actuator.
0, 2	Position Breakaway	Actuator detected problem holding commanded position. Check valve's operating differential pressure and compare with specification. If alarm persists and measured pressure does not exceed valve rating, replace actuator.
0, 1, 2	Sticky Valve	Actuator could not position to within 0.1 degree. Check if there is debris in the valve inhibiting movement and command the valve open and close. If alarm persists and no debris is found, replace actuator.
0, 3	Stuck Valve	Actuator could not position to within 0.1 degree. Re-power the actuator. Check if there is debris in the valve inhibiting movement and command the valve open and close. If alarm persists and no debris is found, replace actuator.
0, 1, 3	Temperature	Actuator senses out-of-specification ambient temperature. Check temperature of actuator's enclosure and remove heat source or promote circulation if too hot. If actuator ambient temperature is within specification, replace valve actuator.
0, 2, 3	Calibration	Actuator is not calibrated. Contact MAXON.
0, 1, 2, 3	DC Supply Voltage	Actuator senses improper +24VDC supply. Check for heavily loaded power supply, a failed supply, or cable length out-of-specification.
0, 4	Reset	Actuator detected a reset condition due to improper software execution, high electrical noise, improper shielding, or electronics failure. If alarm persists after checking for noise source and proper shielding, replace actuator.
0, 1, 4	Hardware	Actuator detected hardware failure. If alarm persists after re-powering actuator, replace actuator.
Control Interface Alarm Light # Pattern		
1, 2	Communication	Control Interface/Valve Actuator communication timeout occurred. Check for an intermittent control cable (4-wire cable and shield) connection. Replace Control Interface or Valve Actuator if control cable connections are sound.
1, 3	Memory	Control Interface detected data corruption. Reset factory defaults and re-commission valve actuator. If alarm persists, replace Control Interface.
1, 2, 3	Lock	Control Interface is "locked" and user has moved command switch from the RUN position to the Command Entry (middle) position. A flashing alarm light also indicates this condition. Move command switch to the RUN position or unlock the unit by entering Command A-7 followed by the 4-digit passcode.
1, 4	Reset	Control Interface detected a reset condition due to improper software execution, high electrical noise, improper shielding, or electronics failure. If alarm persists after checking for noise source and proper shielding, replace Control Interface.

NOTES:

1. If the alarm light is not on or flashing, no alarm conditions exist.

2. If the alarm light is on or flashing, view the alarm code by executing Command A-1, Display Alarms. After command entry, the INC/ DEC switch is used to scroll through the alarm codes. The cause of the alarm can be determined by observing the numbered lights turned on and matching the pattern to a table entry above.

MAINTENANCE INSTRUCTIONS

SAFETY REQUIREMENTS

Regular inspection, testing and recalibration of combustion equipment according to the installation manual is an integral part of its safety. Inspection activities and frequencies shall be carried out as specified in the installation manual.

Actuator replacement

The SMARTLINK[®] valve actuator assembly is factory-calibrated to ensure 0.1 degree positioning accuracy. Therefore, the following actuator replacement procedures should be performed by MAXON personnel or maintenance personnel trained specifically by MAXON.

ACTUATOR REMOVAL:

- 1. Disable the process controller connected to the SMARTLINK[®] and turn off power. Remove the actuator access cover using a 4 mm Allen wrench and verify the green power light is OFF.
- 2. Record the wire color code sequence and then disconnect the four wires and shield from the terminal block. Disconnect any conduit fittings.
- 3. Loosen the clamp collar screws with a 3/16" Allen wrench.
- 4. Remove the four M6x1x18 mm screws connecting the actuator to the adapter with a 5 mm Allen wrench.
- 5. Remove the actuator by holding the actuator housing and pulling the actuator away from the valve.

ACTUATOR REINSTALLATION:

1. Inspect the actuator coupling. Identify the type of key required based on the photos below.





Open keyway

- **Blind keyway** Blind keyway requires 1/8" x 1/8" square key Open keyway requires 1/8" x 3/16" rectangular key
- 2. Verify the clamp collar is loose and position the screw head on the left when looking at the clamp collar at the top.
- Place the actuator shaft with key into the clamp collar. Slide the keyed shaft into the coupling key slot, then rotate the actuator housing so the alignment pin mates with the pin hole in the valve adapter. The parts are a clearance fit but should slip together with little force. Apply pressure until the actuator is flat against the adapter. Do not apply an excessive force. If the sub-assemblies do not mate together, recheck that the clamp is loose and the key is pressed to the bottom of the key slot.
- 4. Verify that the valve will close completely. With the valve closed, the coupling hard-stop pin should be centered and touching the hardstop set screw for butterfly valves. For ball valves, the coupling should hit on the two vertical hard-stop pins in the bracket.
- 5. With valve in the fully closed position, assemble the actuator to the valve adapter with four M6x1x18 mm fasteners using Loctite 242. Use a torque wrench with a 5 mm Allen bit to apply 2 N.m of torque in an alternating diagonal tightening sequence.
- 6. With the valve in the fully closed position, verify that the clamp collar is seated flush against the coupling shoulder. Tighten the stainless steel clamp collar with a torque wrench and 3/16" Allen bit to 19 N.m.
- 7. Make the necessary water-tight electrical conduit connection. Re-connect the four wires to the terminal strip per the original color code sequence. Re-connect the shield wire to the terminal strip, keeping it less than 25 mm in length.
- 8. Apply power to the SMARTLINK® system. Verify the green power light is ON.
- 9. Reinstall the access cover and torque the four fasteners to 2 N.m using a 4mm Allen wrench.
- 10. Place the Control Interface in manual mode by executing Command A-0. Then execute Command C-2 (Enable Valve Calibration/ Check) which places the actuator in a command mode for calibration. When the command is entered, if all the lights flash on the Control Interface, the command was not executed. When the command is properly executed, the green diagnostic (DIAG) light in the actuator terminal block compartment will be on and the unit will no longer respond to 4-20 mA position commands.

- 11. Execute Command C-1 (Calibrate Valve) which closes the valve until the hard-stop is found, establishes a new home (or 0 degree) position, and moves the valve through all 800 positions. The command takes 2 or 3 minutes to execute during which half of the numbered lights on the Control Interface flash on and off. When the command is finished, the Control Interface will flash all of the numbered lights ON if the command was not successful. If the calibration failed, repeat the command a second time.
- 12. Execute Command C-0 to check the new calibration. This command takes less than 90 seconds and will flash half of the numbered lights during execution. At the end of command execution, if all the number lights on the Control Interface flash ON and then OFF, the calibration test failed. Re-mount the valve to the assembly as described above and repeat the calibration procedure. If the calibration test passed, cycle power to the actuator and check for a calibration alarm. (The actuator's green diagnostic light should now be flashing and the alarm light on the Control Interface should be off.)
- 13. Re-enable the process controller commanding SMARTLINK[®].

SMARTLINK[®] REFERENCE TABLES

Table 1: SMARTLINK[®] Control Interface Input / Output Terminal Description

Terminal Name (Abbreviation)	Description
24V / Data Connector	
Field 24VDC Power (F24)	Output: Valve actuator +24VDC power; 25 Watts peak, 12 Watts average
Field Common (FCOM)	Output: Valve actuator +24VDC common
Data A (DA)	Input / Output: Communications network data 'A' signal
Data B (DB)	Input / Output: Communications network data 'B' signal
Supply 24VDC (S24)	Input : Power supply +24VDC; 25Watts peak, 12Watts average
Supply Common (SCOM)	Input: Power supply common
4-20mA Connector	
4-20mA In A + (INA+)	Input: 4-20mA valve position command, current into + and out of - terminal:
4-20mA In A - (INA-)	4mA = minimum position; 20mA = maximum position
4-20mA In B + (INB+)	Reserved for future use
4-20mA In B – (INB-)	
4-20mA Out + (OUT+)	Output: 4-20mA valve position feedback, current out of + and into – terminal;
4-20mA Out - (OUT-)	4mA = 0.0 degrees; 20mA = 80.0 degrees; valve position = [current (mA) - 4.0mA] / 16.0mA * 80.0 degrees (for non-characterized valve actuator)
Relay Input Connector	The following relay inputs are solid-state and require 5 to 24VDC and 2mA (max) to turn "ON". Note #1: The input voltages applied to RI1 through RI6 must all be referenced to the RCOM terminal of the Control Interface.
Relay In 1 (RI1)	Input: The ON state of Relay Input #1 drives the valve actuator to its maximum characterized position, i.e. index #9. The 4-20mA position command signal is ignored when this input is ON. This input function is not supported in Software Version #1.
Relay In 2 (RI2)	Input: The ON state of Relay Input #2 drives the valve actuator to its minimum characterized position, i.e. index #0. The 4-20mA position command signal and RI1 are ignored when this input is ON. This input function is not supported in Software Version #1.
Relay In 3 (RI3)	Input: Reserved for future use
Relay In 4 (RI4)	Input: Reserved for future use
Relay In 5 (RI5)	Input: Reserved for future use
Relay In 6 (RI6)	Input: Reserved for future use
Relay Output Connector	
Relay Out 1 (RO1)	Output: Alarm relay driver output; External interface relay coil voltage is connected to Supply Common (SCOM) through RO1, an open collector transistor output, if one or more of the following alarm conditions exist: valve communications, memory fault, valve actuator alarm, or tamper alarm.
Relay Out 2 (RO2)	Output: Control Enable relay driver output; External interface relay coil voltage is connected to Supply Common (SCOM) through RO2, an open collector transistor output, if one or more of the following alarm conditions exist: valve communications, memory fault, or stuck valve alarm.
Relay Out 3 (RO3)	Output: High Position Limit relay driver output; External interface relay coil voltage is connected to Supply Common (SCOM) through RO3, an open collector transistor output, if valve position >= high limit position.
Relay Out 4 (RO4)	Output: Low Position Limit relay driver output; External interface relay coil voltage is connected to Supply Common (SCOM) through RO3, an open collector transistor output, if valve position <= low position limit position.
Relay Out 5 (RO5)	Output: Manual Control relay driver output; External interface relay coil voltage is connected to Supply Common (SCOM) through RO3, an open collector transistor output, if control interface is in manual control mode.
Relay Common (RCOM)	Output and Input Relay Common

Terminal Name (Abbreviation)	Description		
24V / Data Connector			
Field 24VDC Power (+24)	Input: Valve actuator +24VDC power; 25 Watts peak, 12 Watts average		
Field Common (GND)	Input: Valve actuator +24VDC common		
Data A (DA)	Input / Output: Communications network data 'A' signal		
Data B (DB)	Input / Output: Communications network data 'B' signal		
Shield (SHD)	Field device shield		

Table 2: SMARTLINK[®] Valve Actuator Input / Output Terminal Description

Table 3: SMARTLINK[®] Control Interface Wiring Specifications

Terminal Name (Abbreviation)	Wiring Specification (Maximum Length, Type, Min/Max Size, and special requirements)
24V / Data Connector	
Field 24VDC Power (F24) Field Common (FCOM) Data A (DA) Data B (DB)	100 feet maximum length; MAXON P/N 59829, Connect-Air International P/N W22P-1005, or equivalent; EIA Level 4 cable, 2 twisted pair with shield, 22 AWG; Suggested wiring color code convention: Orange/White (F24), Orange (FCOM), Blue (DA), Blue/White (DB); Requires shield wire termination at both ends. Shield should be connected to earth ground as it enters the enclosure for the Control Interface with a maximum length of 2 inches.
	300 feet maximum length; Belden P/N 3086A; 2 twisted pair with shield; 16 AWG – power pair, 20 AWG - data pair; Suggested wiring color code convention: Brown (F24), Blue (FCOM), White (DA), Black (DB); Requires shield wire termination on both ends. Shield should be connected to earth ground as it enters the enclosure for the Control Interface with a maximum length of 2 inches.
Supply 24VDC (S24) Supply Common (SCOM)	No length limitations other than voltage drop considerations versus wire size constraints; +24VDC;1A/ 25 Watt maximum; 14 to 22 AWG
4-20mA Connector	
4-20mA In A + (INA+) 4-20mA In A - (INA-) 4-20mA In B + (INB+) 4-20mA In B - (INB-) 4-20mA Out + (OUT+) 4-20mA Out - (OUT-)	1000 feet maximum length; Belden 9535, 2-conductor, 100% shield coverage, 300V 80C (UL 2464, CSA PCC FT 4) or equivalent; Inputs (INA+/- & INB+/-) Requires shield wire termination at Control Interface end. Shield should be connected to earth ground as it enters the enclosure for the Control Interface with a maximum length of 2 inches. Output (OUT+/-) shield should be terminated at user's controller end.
Relay Input Connector	
Relay In 1 (RI1) Relay In 2 (RI2) Relay In 3 (RI3) Relay In 4 (RI4) Relay In 5 (RI5) Relay In 6 (RI6)	No length limitations; 14 to 22 AWG; Follow local codes for wire type
Relay Output Connector	
Relay Out 1 (RO1) Relay Out 2 (RO2) Relay Out 3 (RO3) Relay Out 4 (RO4) Relay Out 5 (RO5) Relay Common (RCOM)	No length limitations; 30 VDC max & 100 mA max; 14 to 22 AWG; Follow local codes for wire type

Table 4: SMARTLINK[®] DIN Rail Assembly Input / Output Terminal Description

Terminal Designator: Name (Abbreviation)	Description
Power Supply VAC Terminals	Provided only if optional DC supply is provided
Line Voltage (L1)	120 to 230 VAC power source, 50-60Hz
Neutral (L2)	Neutral
Ground (GND)	Earth Ground
Relay Output Terminal Block	
Alarm (AL) Alarm Return (ALR)	Output: Alarm relay contact, Normally open, 6A, 250VAC/DC max; Contacts closes if one or more of the following alarms exist: valve communications, memory fault, valve actuator alarm, or tamper alarm.
Control Enable (CE) Control Enable Return (CER)	Output: Control Enable relay contact; Normally open, 6A, 250VAC/DC max; Contact closes if one or more of the following alarm conditions exist: valve communications, memory fault, or stuck valve alarm.
High Position Limit (HPL) High Position Limit Return (HPLR)	Output: High Position relay contact; Normally open, 6A, 250VAC/DC max; Contact closes if valve position >= high limit position.
Low Position Limit (LPL) Low Position Limit Return (LPLR)	Output: Low Position Limit relay contact; Normally open, 6A, 250VAC/DC max; Contact closes if valve position <= low position limit position.
Manual Control (MC) Manual Control Return (MCR)	Output: Manual Control relay contact; Normally open, 6A, 250VAC/DC max; Contact closes if Control Interface is in manual control mode.
Command Common (CCOM)	of all input command signals below. End-user must make this connection for proper operation of input commands; For input relays with VAC-rated coils, this terminal is typically connected to L2.
High Position Command (HPC)	Input: High Position Command drives the valve actuator to its maximum characterized position, i.e. index #9. The 4-20mA position command signal is ignored when this input is energized. The HPC input function is not supported in Software Version #1.
Low Position Command (LPC)	Input: Low Position Command drives the valve actuator to its minimum characterized position, i.e. index #0. The 4-20mA position command signal and the HPC relay input are ignored when this input is energized. The LPC input function is not supported in Software Version #1.
4-20mA Terminal Block	
4-20mA ln A + (INA+)	Input: 4-20mA valve position command, current into + and out of - terminal:
4-20mA In A - (INA-)	4mA = minimum position; 20mA = maximum position
4-20mA In B + (INB+)	Beserved for future use
4-20mA In B – (INB-)	
4-20mA Out + (OUT+)	Output: 4-20mA valve position feedback, current out of + and into - terminal:
4-20mA Out - (OUT-)	4mA = 0.0 degrees; 20mA = 80.0 degrees; valve position = [current (mA) - 4.0mA] / 16.0mA * 80 degs (for non-characterized valve actuator)
Network Terminal Block	
Field 24VDC Power (F24)	Output: Communications network +24VDC power
Field Common (FCOM)	Output: Communications network common
Data A (DA)	Input / Output: Communications network data 'A' signal
Data B (DB)	Input / Output: Communications network data 'B' signal
24VDC Terminal Block	Pre-wired only if optional DC supply is provided
Supply 24VDC Power (S24)	24VDC power source; 1A peak current
Supply Common (SCOM)	24VDC power source common

Table 5: SMARTLINK[®] DIN Rail Assembly Wiring Specifications

Terminal Designator: Name (Abbreviation)	Wiring Specification (Maximum Length, Type, Min/Max Size, and special requirements)
VAC Terminal Block	
Line Voltage (L1) Neutral (L2) Ground (GND)	No length limitations; 14 to 22 AWG; Follow all local and NEC 1 wiring codes; Protective Earth should also be connected to the ground lug of the enclosure that houses the Control Interface.
Relay Output Terminal Block	
Alarm (AL) Alarm Return (ALR) Control Enable (CE) Control Enable Return (CER) High Position Limit (HPL) High Position Limit Return (HPLR) Low Position Limit (LPL) Low Position Limit Return (LPLR) Manual Control (MC) Manual Control Return (MCR)	No length limitations; 14 to 22 AWG; Follow all local and NEC 1 wiring codes.
Relay Input Terminal Block	
Command Common (CCOM) High Position Command (HPC) Low Position Command (LPC)	No length limitations; 14 to 22 AWG; Follow local codes for wire type.
4-20mA Terminal Block	
4-20mA In A + (INA+) 4-20mA In A - (INA-) 4-20mA In B + (INB+) 4-20mA In B - (INB-) 4-20mA Out + (OUT+) 4-20mA Out - (OUT-)	1000 feet maximum length; Belden 9535, 2-conductor, 100% shield coverage, 300V 80C (UL 2464, CSA PCC FT 4) or equivalent; Inputs (INA+/- & INB+/-) Requires shield wire termination at enclosure that houses the Control Interface end. Shield should be connected to the ground lug with a maximum length of 2 inches. Output (OUT+/-) shield should be terminated at user's controller end.
Network Terminal Block	
Field 24VDC Power (F24) Field Common (FCOM) Data A (DA) Data B (DB)	100 feet maximum length; MAXON P/N 59829, Connect-Air International P/N W22P-1005, or equivalent; EIA Level 4 cable, 2 twisted pair with shield, 22 AWG; Suggested wiring color code convention: Orange/White (F24), Orange (FCOM), Blue (DA), Blue/White (DB); Requires shield wire termination at both ends. Shield should be connected to ground lug of enclosure that houses the Control Interface with a maximum length of 2 inches.
	300 feet maximum length; Belden P/N 3086A; 2 twisted pair with shield; 16 AWG – power pair, 20 AWG - data pair; Suggested wiring color code convention: Brown (F24), Blue (FCOM), White (DA), Black (DB); Requires shield wire termination on both ends. Shield should be connected to earth ground as it enters the enclosure for the Control Interface with a maximum length of 2 inches.
24VDC Terminal Block	
Supply 24VDC Power (S24) Supply Common (SCOM)	No wiring required if optional supply and pre-wiring are specified; If supply is not provided, no length limitations exist other than voltage drop considerations versus wire size constraints; 14 to 22 AWG; Follow all local and NEC 1 codes

Table 6: SMARTLINK[®] Interface Relay Checkout Procedures

SMARTLINK [®] DIN-Rail Assembly Terminal Number: Name (Abbreviation)	SMARTLINK [®] Control Interface Relay Driver Terminal Name (Abbreviation)	Checkout Procedure to verify proper relay contact operation
Relay Output Terminal Block	Relay Output Drivers	
Alarm (AL) Alarm Return (ALR)	Relay Out 1 (RO1)	Temporarily disconnect the Data A or B signal to the Valve Actuator. Within a few seconds, the Alarm relay (connected to the Control Interface RO1 terminal) should be energized.
Control Enable (CE) Control Enable Return (CER)	Relay Out 2 (RO2)	After power up, the Control Enable relay (connected to the Control Interface RO2 terminal) should normally be energized. Temporarily disconnect the Data A or Data B signal to the Valve Actuator. Within a few seconds, the Control Enable relay should not be energized.
High Position Limit (HPL) High Position Limit Return (HPLR)	Relay Out 3 (RO3)	Perform Operational Checkout Step #2 or #3 (page 36) to move the valve actuator throughout its full travel range. With the valve in its maximum position, the High Position Limit relay (connected to the Control Interface RO3 terminal) should be energized. With the valve commanded to a position 95% or less than its maximum position, the relay should not be energized.
Low Position Limit (LPL) Low Position Limit Return (LPLR)	Relay Out 4 (RO4)	Perform Operational Checkout Step #2 or #3 (page 36) to move the valve actuator throughout its full travel range. With the valve in its minimum position, the Low Position Limit relay (connected to the Control Interface RO4 terminal) should be energized. With the valve commanded to a position 5% or more above its minimum position, the relay should not be energized.
Manual Control (MC) Manual Control Return (MCR)	Relay Out 5 (RO5)	After power up, the Manual Control relay (connected to the Control Interface RO5 terminal) should not be energized. Put the SMARTLINK [®] in a local manual mode as described on page 42. Once the system is put in manual mode, the Manual Control relay should be energized.
Relay Input Terminal Block		
High Position Command (HPC)	Relay In 1 (RI1)	Energize HPC terminal and verify that valve moves to its maximum characterized position, index #9. (Input function not supported in Software Version #1.)
Low Position Command (LPC)	Relay In 2 (RI2)	Energize LPC terminal and verify that valve moves to its minimum characterized position, index #0. (Input function not supported in Software Version #1.)

Table 7: SMARTLINK[®] System Configuration Summary

System configuration of SMARTLINK[®] is accomplished through execution of the commands shown below, using the switches and lights on the Control Interface. Before performing any system configuration function, review the factory default settings. In many applications, modification of the default configuration is not necessary.

Configuration Function (Command #)	Factory Default (Configuration #)	Description
Select LOS Position (B-0)	No position change (#4)	Desired valve position when a loss of signal (L.O.S.) event occurs. A loss of signal condition exists if the position command signal drops below 0.05 mA. Configuration setting #0, 1, 2, and 3 correspond to the positions defined at index #0, 3, 6, and 9, respectively. Setting #4 corresponds to no position change (i.e. actuator remains in last position before loss of signal).
Select Standby Position (B-2)	Position Index 0 (#0)	Desired valve position when adjustment mode switch is placed in the STANDBY position. (The STANDBY function is not active when the unit is in RUN mode.) Configuration setting #0, 1, 2, and 3 correspond to the positions defined at index #0, 3, 6, and 9, respectively.
Select Control Deadband (B-3)	0.06% Deadband (#2)	Control deadband placed around the position command input signal to eliminate unwanted actuator movement caused by electrical noise on the 4-20 mA position command. Configuration setting #0, 1, 2, 3, 4, and 5 correspond to a deadband of 0, 0.03, 0.06, 0.13, 0.16, and 0.19%, respectively.
Set High Limit Position Threshold (B-4)	80.0 degrees (N/A)	Relay driver Output #3 (RO3) will energize the High Position Limit relay when the valve position is >= high position limit threshold. This value is automatically set to 1.0 degree less than the maximum valve position when modified using Commands A-2 or A-5.
Set Low Limit Position Threshold (B-5)	0.0 degrees (N/A)	Relay driver Output #4 (RO4) will energize the Low Position Limit relay when the valve position is <= low position limit threshold. This value is automatically set to 1.0 degree above the minimum valve position when modified using Commands A-2 or A-6.
Set Auto Ramp Adjust On/Off (B-6)	Auto Ramp ON (#1)	The automatic ramp function is used during the Valve Position Setup Mode to create a linear position ramp between the position being adjusted and the two adjacent position indexes. This provides a position "smoothing" of the valve profile and simplifies valve characterization. Setting #0 is Auto Ramp OFF and setting #1 is ON.
Enter New Lock Combination (C-4)	Passcode: 0,0,0,0 (N/A)	4-digit electronic passcode to prevent tampering. The passcode is required to modify the configuration only if the lock is enabled. See Select Lock Enable/Disable configuration below.
Select Lock Enable / Disable (C-5)	Lock Disable (#0)	Enable / Disable selection of the electronic "lock" function. If enabled, the stored passcode must be entered to modify any configuration or valve profile data. Setting #0 and #1 correspond to Lock Disable and Lock Enable, respectively.

CHANGING A SYSTEM CONFIGURATION SETTING:

- 1. Select and enter the required system configuration command.
- 2. After the command is entered, one of the numbered (0-9) lights will be on, indicating the current configuration setting. (For example: If the lock configuration is set to #0, Lock Disable, the 0 light will be solidly lit after Command C-5, Lock Enable/Disable, is entered successfully.)
- 3. Select the desired configuration setting by using the INC/DEC switch. As the INC/DEC switch is momentarily pushed up or down, the selected setting changes as indicated by turning on the corresponding numbered (0-9) light.
- 4. Push the ENTER button after the desired configuration setting is selected. The numbered light that is lit to indicate the selected configuration will momentarily turn off indicating the command is complete and the configuration setting is saved.
- 5. To confirm the correct setting is saved, re-enter the command and verify the new setting by the numbered (0-9) light indication.

51

Table 8: SMARTLINK[®] User Commands - Command Set 'A'

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'A'	
A-0: Enter Manual Positioning Mode	Command A-0 is used to enter a Manual Positioning Mode that <u>overrides</u> the 4-20 mA, position command input. To execute Command A-0, the position command signal must first be driven to 4mA or less. If the numbered lights flash momentarily after entering Command A-0, - the position command may not be less than 4mA, - the adjustment mode switch may be in the STANDBY position, or - unit may be "locked" to prevent tampering.
	After entering Command A-0, the yellow manual light on the Control Interface will be on and RO5 (Relay Output driver #5) will energize the Manual Control relay (if installed). Once this command has been entered, the INC/DEC switch can be used to move the valve open or close. If the adjustment mode switch is in the INDEX position, the INC/DEC switch is used to move between the 19 electronic position "indexes". (See Commissioning Sheet on page 40 for the factory default valve positions for each index).
	If the adjustment mode switch is in the ADJ position, pushing the INC/DEC switch up or down changes the valve position in 1.0 degree steps. If the INC/DEC switch is held in the up or down position, the position is continuously adjusted until the max/min position is reached. <i>This command should not be executed when the valve is part of an operating process that requires continuous, closed-loop valve positioning.</i>
A-1: Display Alarm Codes	After entering Command A-1, the INC/DEC switch is used to scroll through all current alarm conditions. If the red alarm ("ALM") light on the Control Interface is on, one or more alarm condition exists. (See page 43 for Alarm Codes.)
A-2: Enter Valve Position Setup Mode	Command A-2 is used to enter the Valve Position Setup Mode for modifying the 19 position profile. To execute Command A-2, the position command signal must be 4 mA or greater. (If the numbered lights flash momentarily after entering A-0, the adjustment mode switch may be in the STANDBY position, or the unit may be "locked" to prevent tampering.)
	After entering Command A-2, both the yellow manual light and green run light will be flashing along with 1 or 2 of the numbered lights that are used to indicate the valve's position index. The flashing lights indicate that one of the 19 position indexes can now be modified using the INC/DEC switch. (For example, if the #1 and #2 light are flashing, position index 1.5 can be adjusted.) The position command signal determines which of the 19 position indexes can be modified. With the adjustment mode switch in the ADJ position, pushing the INC/DEC switch up or down changes the valve position in +/-0.1 degree steps. If the INC/DEC switch is held in the up or down position for more than 3 seconds, the valve position is changed in 0.5 degree steps. After moving the valve to the desired position, the Enter button must be pressed to save the position setting. When the Enter button is pressed, the blinking position index lights (0-9) and command set light 'a' will momentarily turn off. See Commissioning Sheet on page 40 for a complete description of the valve characterization procedure.
	In the Position Setup mode a maximum movement of 8 degrees from the stored position is permitted. When the 8 degree limit is reached all of the position index lights will momentarily flash on. If the adjustment mode switch is in the INDEX position, valve positioning is inhibited and is indicated by a momentary flash of the position index lights if an INC/DEC switch adjustment is attempted. Valve positioning is also inhibited if the position command signal is less than 0.05 mA and is indicated by turning off the position index lights.
A-3: Reserved for future use	N/A
A-4: Reserved for future use	N/A

Table 8: SMARTLINK[®] User Commands - Command Set 'A' (continued)

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'A'	
A-5: Set Max Position & Min/ Max Ramp	Command A-5 is used to enter the Valve Position Setup Mode for adjusting the maximum position (index #9) and setting a linear position ramp from the minimum to maximum stored positions. To execute Command A-5, the position command signal, must be 20.00mA, +/-0.15 mA. (If the numbered lights flash momentarily after command entry, the position command input is not 20mA or the adjustment mode switch is in the STANDBY position.) After entering the command, both the yellow manual light and green run light will be flashing along with a flashing #9 light. The valve's maximum position can now be modified using the INC/DEC switch. If the adjustment mode switch is in the ADJ position, pushing the INC/DEC switch up or down changes the valve position in +/-0.1 degree steps. If the INC/DEC switch is held in the up or down position for more than 3 seconds, the valve position is changed in 0.5 degree steps. After moving the valve to the desired position, the Enter button must be pressed to save the position setting. When the Enter button is pressed, the #9 position index light and the command set light 'a' will momentarily turn off.
	adjustment mode switch is in the INDEX position, valve positioning is inhibited and is indicated by a momentary flash of the position index lights when an INC/DEC adjustment is attempted. After the command is entered, valve positioning is also inhibited if the command signal changes from 20.00 mA.
A-6: Set Min Position & Min/ Max Ramp	Command A-6 is used to enter the Valve Position Setup Mode for adjusting the minimum position (index #0) and setting a linear position ramp from the minimum to maximum positions. To enter Command A-6, the position command signal must be 4.00mA, +/-0.15 mA. Adjustment of the minimum position is performed identical to adjustment of the maximum position, Command A-5.
A-7: Unlock Valve Configuration	Command A-7 permits entry of a 4-digit passcode to "unlock" the system configuration and position profile for user modification. A flashing alarm light indicates a "locked" unit. If the alarm light is not flashing, the unit is already unlocked and the numbered lights will flash momentarily if command entry is attempted. After the command is entered, the INC/DEC command is used to select a passcode digit as indicated by the lights. Once selected, the Enter button should be pushed and the process repeated 3 more times. If the 4-digit pass-code is correct, the alarm light will stop flashing and be turned off if no other alarms exist. To re-lock the unit, move the command switch to the RUN position

Table 9: SMARTLINK[®] User Commands - Command Set 'B'

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'B'	
B-0: Select Loss of Signal (LOS) Position	Command B-0 is a configuration command that permits selection of valve position when a loss of signal event occurs (below 0.05 mA). After B-0 is entered, the current configuration is shown by one of the numbered lights. Select an L.O.S. configuration, #0,1,2,3, or 4, using the INC/DEC switch and push the Enter button after the desired configuration is indicated by the numbered lights.
	Configuration #0, 1, 2, and 3 correspond to the positions defined at index #0, 3, 6, and 9 (max), respectively. (See Commissioning Sheet on page 40 for the default valve position for each index). Configuration #4 corresponds to no position change (actuator remains in last position before loss of signal). The factory default configuration is #4.
B-1: Reserved for future use	N/A
B-2: Select Standby Position	Command B-2 is a configuration command that permits selection of the STANDBY valve position. After command entry, the current configuration is shown by one of the numbered lights. Select a standby position configuration, #0-3, using the INC/DEC switch and push the Enter button after the desired configuration is indicated by the numbered lights. Configuration #0, 1, 2, and 3 correspond to the positions defined at index #0, 3, 6, and 9 (max), respectively. (See Commissioning Sheet on page 40 for the default position for each index).
	The STANDBY position is useful if an emergency situation occurs during Valve Position Setup and the user wants the valve to immediately move to a "safe" position, regardless of the 4-20 mA position command. The valve moves to the STANDBY position when the adjustment mode switch is in the downward "STANDBY" position.
B-3: Select Deadband	Command B-3 is a configuration command that is used to select the deadband placed around the position command input signal. If the input signal contains spurious noise, hunting of the actuator may occur. It is recommended that the source of the noise is eliminated or the 4-20 mA cable type is verified as well as its shield and ground connections. If the noise cannot be eliminated, the deadband can be increased as a last resort.
	After Command B-3 is entered, the current configuration is shown by one of the numbered lights. Select a deadband configuration, #0-5, using the INC/DEC switch and push the Enter button after the desired configuration is indicated by the numbered lights. Configuration #0, 1, 2, 3, 4 and 5 correspond to a deadband of 0, 0.03, 0.06, 0.13, 0.16 and 0.19%, respectively. The factory default configuration is #2, 0.06%.
B-4: Set High Limit Position Threshold	Command B-4 is a configuration command that is used to adjust the high limit position threshold. Relay driver Output #3 (RO3) will energize the High Position Limit relay when the valve position is equal to or greater than the stored high limit position threshold. The factory default is 80.0 degrees and is automatically set to 1.0 degree less than the maximum valve position when modified using Commands A-2 or A-5. If the factory default or automatic 1.0 degree offset (from a user-selected maximum) is acceptable, this configuration is not necessary.
	To execute Command B-4, the valve system must be in the Manual Mode (See Command A-0). With the unit in Manual Mode and adjustment mode switch in the "ADJ" middle position, push the Enter button and the valve will be driven to the stored value. Then push the INC/DEC switch up or down to change the valve position in +/-1.0 degree steps. If the INC/DEC switch is held in the up or down position, the valve position is continuously changed in +/-1.0 degree steps. After moving the valve to the desired high limit position, the Enter button must be pressed to save the setting. When the Enter button is pressed, the position index and command set 'b' lights will momentarily turn off, indicating the new value has been stored.

Table 9: SMARTLINK[®] User Commands - Command Set 'B' (continued)

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'B'	
B-5: Set Low Limit Position Threshold	Command B-5 is a configuration command that is used to adjust the low limit position threshold. Relay driver Output #4 (RO4) will energize the Low Position Limit relay when the valve position is less than or equal to the stored low limit position threshold. The factory default is 0.00 degrees and is automatically set to 1.0 degree above the minimum valve position when modified using Commands A-2 or A-6. If the factory default or automatic 1.0 degree offset (from a user-selected minimum) is acceptable, this configuration is not necessary.
	To execute Command B-5, the valve system must be in the Manual Mode (See Command A-0). With the unit in Manual Mode and adjustment mode switch in the "ADJ" middle position, push the Enter button and the valve will be driven to the stored value. Then push the INC/DEC switch up or down to change the valve position in +/-1.0 degree steps. If the INC/DEC switch is held in the up or down position, the valve position is continuously changed in +/-1.0 degree steps. After moving the valve to the desired low limit position, the Enter button must be pressed to save the setting. When the Enter button is pressed, the position index and command set 'b' lights will momentarily turn off, indicating the new value has been stored.
B-6: Set Auto Ramp Adjust On/Off	Command B-6 is a configuration command that is used to set on or off the automatic ramp function. The factory default is Auto Ramp ON, configuration #1. Configuration #0 is Auto Ramp OFF.
	After command entry, the current configuration is shown by one of the numbered lights. Select Auto Ramp ON, #1, or Auto Ramp OFF, #0 using the INC/DEC switch and push the Enter button after the desired configuration is indicated by the numbered lights.
	The automatic ramp function is used during the valve Position Setup Mode to create a linear position ramp between the position being adjusted and the two adjacent position indexes. This provides a position "smoothing" of the valve profile and simplifies valve characterization because only 10 of the 19 position indexes (i.e. index 0, 1, 2, 3,instead of 0, 0.5, 1.0, 1.5, etc.) require adjustment. For custom valve characterization that requires precision adjustment of each of the 19 position indexes, the Auto Ramp function should be OFF.
B-7: Reserved for future use	N/A

Table 10: SMARTLINK[®] User Commands - Command Set 'C'

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'C'	
C-0: Check Valve Calibration	For use by Maxon-trained field personnel.
C-1: Calibrate Valve	For use by Maxon-trained field personnel.
C-2: Enable Valve Calibration / Check	For use by Maxon-trained field personnel.
C-3: Reset Factory Default Settings	Command C-3 is a configuration command that is used to reset all system configuration and valve position data with the exception of the backup position profile. To execute Command C-3, the valve system must first be in Position Setup Mode (See Command A-2). With the unit in Position Setup Mode and Command C-3 selected, push the Enter button. Light #3 and the command set 'c' light should momentarily turn off indicating the reset is complete.
C-4: Enter New Lock Combination	Command C-4 is a configuration command that is used to enter a new 4-digit electronic passcode to prevent tampering. To execute Command C-4, the electronic "lock" must be enabled and the unit must be in the "unlocked" state. (A locked unit is indicated by a flashing alarm light.) If all the numbered lights momentarily flash after command entry, the "lock" function is disabled or the unit is currently locked. See Command C-5 to enable the lock function or Command A-7 to unlock the unit.
	After the command is entered, the INC/DEC command is used to select a passcode digit as indicated by the numbered lights. After the first digit is selected, the Enter button should be pushed and the numbered light and command set light 'c' momentarily turn off. Repeat the previous digit entry
	process 3 more times for a total of 4 digits. After the 4 th digit is entered, the number #4 light will turn on and the command set 'c' light will begin to flash, indicating that a new 4-digit passcode has been saved and the command is complete.
	If the 4-digit passcode is forgotten, call MAXON for assistance. The factory default 4-digit passcode is 0-0-0-0.
C-5: Select Lock Enable / Disable	Command C-5 is a configuration command that is used to enable or disable the electronic "lock" function. The factory default is configuration #0, Lock Disable. Configuration #1 is Lock Enable.
	To execute Command C-5, the unit must be in the unlocked state. (The alarm light will be flashing rapidly if the unit is locked. See Command A-7 to unlock the device.) After command entry, the current configuration is shown by one of the numbered lights. Select either configuration #0 or #1 using the INC/DEC switch and push the Enter button after the desired configuration is indicated by the numbered lights.

Table 10: SMARTLINK[®] User Commands - Command Set 'C' (continued)

SMARTLINK [®] Commands Number: Name	Description of command purpose and usage
Command Set 'C'	
C-6: Save Profile as Backup	Command C-6 is a configuration command that is used to save the currently stored valve position profile. This command is used in conjunction with C-7, Restore Backup Profile, to help ensure that a proven valve position profile can be restored without re-commissioning if a factory default reset is accidentally performed or incorrect position adjustments are made during the commissioning process. To execute Command C-6, the valve system must first be in Position Setup Mode (See Command A-2). With Command C-6 selected and the unit in Position Setup Mode, push the Enter button. Light #6 and the command set 'c' light should momentarily turn off, indicating the command has been executed.
C-7: Restore Backup Profile	Command C-7 is a configuration command that is used to restore a backup valve position profile as the current operating profile. This command is used in conjunction with C-6, Save Profile as Backup, to help ensure that a proven valve position profile can be restored without re-commissioning if a factory default reset is accidentally performed or incorrect position adjustments are made during the commissioning process. To execute Command C-6, the valve system must first be in Position Setup Mode (See Command A-2). With the unit in Position Setup Mode and Command C-7 selected, push the Enter button. Light #7 and the command set 'c' light should momentarily turn off, indicating the command has been executed.

GENERAL COMMAND ENTRY INSTRUCTIONS:

- 1. A user command can be performed only when the following conditions are all satisfied:
 - a) MODE switch is not in the RUN position,
 - b) one of the green command set light (a, b, c) is <u>blinking</u>,
 - c) ADJUST switch is not in the STANDBY position, and

d) unit is "unlocked". (Condition 'd' is not required for Command A-7, Unlock Valve Configuration and Command A-1, Display Alarm Codes.)

e) For some commands, the unit must be in a specific mode or have the correct 4-20 mA command signal (see command entry requirements listed on page 37 or in Reference Tables 8 through 10 on page 52 through page 57).

- 2. If the a, b, or c command set light is not blinking, momentarily push the MODE switch in the CMD abc position (up) or, change the position of the rotary CMD SEL switch. This will start the command set light blinking and permit a command to be entered.
- 3. Select the desired command set by momentarily pushing the MODE switch upward to the CMD abc position. Subsequent CMD abc switch entries will change the command set selection as indicated by the green command set (a, b, c) lights.
- 4. Select the desired command number by changing the position of the rotary CMD SEL switch. When one of the command set lights is blinking, the command number selected is indicated by the corresponding numbered (0-9) light being lit.
- 5. After the command set and number are selected, press the ENTER button. If all of the numbered lights flash momentarily after the ENTER button is pushed, a command entry error has occurred and the command was not executed. If an entry error occurs, check if the unit is locked (i.e. alarm light blinking) or the ADJUST switch is in the STANDBY position. If neither condition exists, check the specific entry requirements of the command.